



SUPRA DIGITAL CONTROL SYSTEM

Programming and users guide



English

CONTENTS

1.

Preface

Safety notes	3
Safety precautions for trained personnel and nomenclature per ISO/EN 7010.....	3

2.

Introduction

Supra Control System.....	8
Model 250 controller	14
Model 290 engine interface.....	17
Model 320 display/keypad.....	20
Model 380 Ethernet module.....	20

3.

Operating the Supra controller

Operating with Model 320 display/keypad.....	22
Operating with PC.....	22
Control Sequence outline	23
Using GUI software	27
Table of input/output parameters.....	46
Controller panel operation	52

SAFETY NOTES

Personnel performing operations, procedures, and practices that are included or implied in this manual shall observe the following warnings. Disregard of these warnings and precautionary information can cause serious injury or even **DEATH**.



WARNING

- Use of this equipment in any manner not specified herein may impair the protection provided by this equipment.
- Do not use this equipment in any manner not specified by the manufacturer.
- Maintenance must be performed by qualified personnel.
- Electrical shock and **death** can occur from electrical/electronic systems regardless of voltage.
- Remove all jewelry (rings, watches, bracelets, etc.) from hands and arms before performing any electrical test or maintenance activity.
- When servicing the generator, engage the emergency stop switch or disconnect all power depending on the service required. The **EMERGENCY STOP** will lock out automatic, manual, or remote starts which will prevent personal injury.
- A buzzer will sound at the start sequence to give a warning that the generator is about to start; you must be careful of all rotating parts.
- Working in the vicinity of a lead acid battery is dangerous. Batteries generate explosive gases during normal operation.

SAFETY PRECAUTIONS FOR TRAINED PERSONNEL AND NOMENCLATURE PER ISO/EN 7010

SERVICE AREA



WARNING

- Sufficient Ventilation
Inhalation of exhaust fumes and dust particles may be hazardous to your health.
- Safety Equipment
Fire extinguisher(s), first aid kits and an eye wash / shower station should be close at hand (or easily accessible) in case of an emergency.


(2) WORK – WEAR (GARMENTS)



WARNING

- Safe Work Clothing

Appropriate safety wear (gloves, special shoes/boots, eye and ear protection, head gear, harnesses, clothing, etc.) should be used / worn to match the task at hand. Avoid wearing watches, jewelry, rings, unbuttoned cuffs, ties or loose fitting clothes around moving / rotating machinery. A serious accident may occur if clothing or jewelry is caught in moving/rotating machinery or completes an electrical circuit. The battery and Supercapacitor used in the generator set can deliver a jolt of energy in excess of 3000 amps at 50 volts which will instantaneously vaporize metal jewelry.

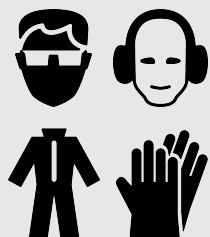

(3) TOOLS



WARNING

- Appropriate Lifting / Holding

When lifting a generator set, use only a lifting device (crane, backhoe etc.) with sufficient lifting capacity. Do not overload the device. Use only a chain, cable, or lifting strap as an attaching device. Do not use rope, serious injury may result. To hold or support a generator set, secure it to a cart designed to carry its weight. Do not overload this device, serious injury may result. Never run the generator set without it being properly secured, serious injury may result.

- Appropriate Tools

Always use tools that are designed for the task at hand. Incorrect usage of tools may result in damage to the generator set and/or serious personal injury.

(4) GENUINE PARTS AND MATERIALS



CAUTION

- Genuine Parts

Always use genuine Polar Power Inc. recommended parts and goods. Damage to the generator set, shortened service life, and/or personal injury may result from failure to do so.

(5) FASTENER TORQUE



WARNING

- Torque Specifications on Fasteners

Always follow the torque values and procedures as designated in the service manual OR referenced to in this installation manual. Incorrect torque values, procedures, and/or tools may cause damage to the generator set, and/or cause personal injury.

(6) ELECTRICAL



WARNING

- Short Circuits

Always disconnect the DC Generator from the battery bank and/or rectifiers before working on the electrical system or the generator itself. For -48 V systems disconnect the negative and for negative ground systems disconnect the +. Always re-confirm polarity of leads before reconnecting to terminals. An accidental “short circuit” or “reverse polarity” may cause damage, fire, and/or personal injury. Remember to connect the Positive (+) battery cable (back onto the battery) last. Fasten the terminals to the proper torque specification.



- Charging Batteries

Our systems incorporate different battery technologies, please confirm the type of battery chemistry before proceeding to work on any battery. Charging wet celled batteries produces hydrogen gas. Hydrogen gas is extremely explosive. Keep sparks, open flame and any other form of ignition away. Explosion may occur causing severe personal injury. Keep Lithium Batteries dry and stored away from all sources of water vapor, moisture, or condensation.

- Battery Electrolyte

Batteries contain different types of electrolytes please review the MSDS sheets before handling any type of electrolyte that may have leaked from the battery cell. Do NOT allow it to come in contact with clothing, skin, and/or eyes, severe burns will result.

(7) WASTE MANAGEMENT



WARNING

- Observe the following instructions with regard to hazardous waste disposal. Negligence of these regulations will have a serious impact on the environment.
1. Waste fluids such as lube oil, fuel, and coolant shall be carefully put into separate sealed containers and disposed of properly.
 2. Do NOT dispose of waste materials irresponsibly by dumping them into the sewer, overland, or into natural waterways.
 3. Waste materials such as oil, fuel, coolant, solvents, filter elements and batteries, must be disposed of properly according to local ordinances. Consult the local authorities or reclamation facility.

(8) FURTHER PRECAUTIONS



WARNING

- Fueling / Refueling
Keep sparks, open flames or any other forms of ignition (match, cigarette, etc.) away when fueling/refueling the unit.

FIRE AND/OR AN EXPLOSION MAY RESULT!!!



- Hot Surfaces
Do **NOT** touch the top of the generator set (or any of its components) while it is running or shortly after shutting it down. Scalding / serious burns may result. Allow the generator set to cool down before attempting to approach it.



- Rotating Parts
Be careful around moving/rotating parts. Loose clothing, jewelry, ties, or tools may become entangled causing damage to the engine and/or cause severe personal injury.
 - Preventing burns from scalding
1. Never open the radiator filler cap shortly after shutting the engine down. Steam and hot water will spurt out and seriously burn you. Allow the engine to cool down before attempting to open the filler cap.
 2. Some radiator caps have a pressure release, after the engine is cool down carefully lift the release tab, keeping in mind that hot steam or water can spray from the lift tab.
 3. Securely tighten the filler cap after checking the radiator fluid level.

(9) PERSONAL PRECAUTIONS



ATTENTION

1. Keep plenty of fresh water and soap nearby in case battery acid contacts skin, clothing or eyes.
2. Wear complete eye protection. Avoid touching eyes while working near batteries. Wash your hands with soap and warm water when done.
3. If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters an eye, flood the eye with running cool water at once for at least 15 minutes and get medical attention immediately following.
4. Baking soda neutralizes lead acid battery electrolyte. Keep a supply on hand in the area of the batteries.
5. **NEVER** smoke or allow a spark or flame in vicinity of a battery or generator.
6. Be extra cautious to reduce the risk of dropping a metal tool onto batteries. It could short circuit the batteries or other electrical parts that can result in fire or explosion.
7. Remove personal metal items such as rings, bracelets, necklaces, and watches when working with a battery or other electrical current. A battery can produce a short circuit current high enough to weld a ring or the like to metal, causing severe burns.



ATTENTION

When servicing the generator, engage the emergency stop switch or disconnect all power depending on the service required.

The **EMERGENCY STOP** will lock out automatic, manual, or remote starts. This will prevent injury.


A buzzer will sound at the start sequence to give a warning that the generator is about to start; you must be careful of all rotating parts.

SCOPE

This manual provides safety guidelines as well as operating and programming information for the Supra Digital Control System

INTRODUCTION

The Supra Digital Control System is a highly integrated control solution that will improve the reliability, serviceability, and the ability to remotely control a DC Generator based power systems (Genset). The Supra Control System can control power to DC loads and serve as a fuel based programmable battery charging system.

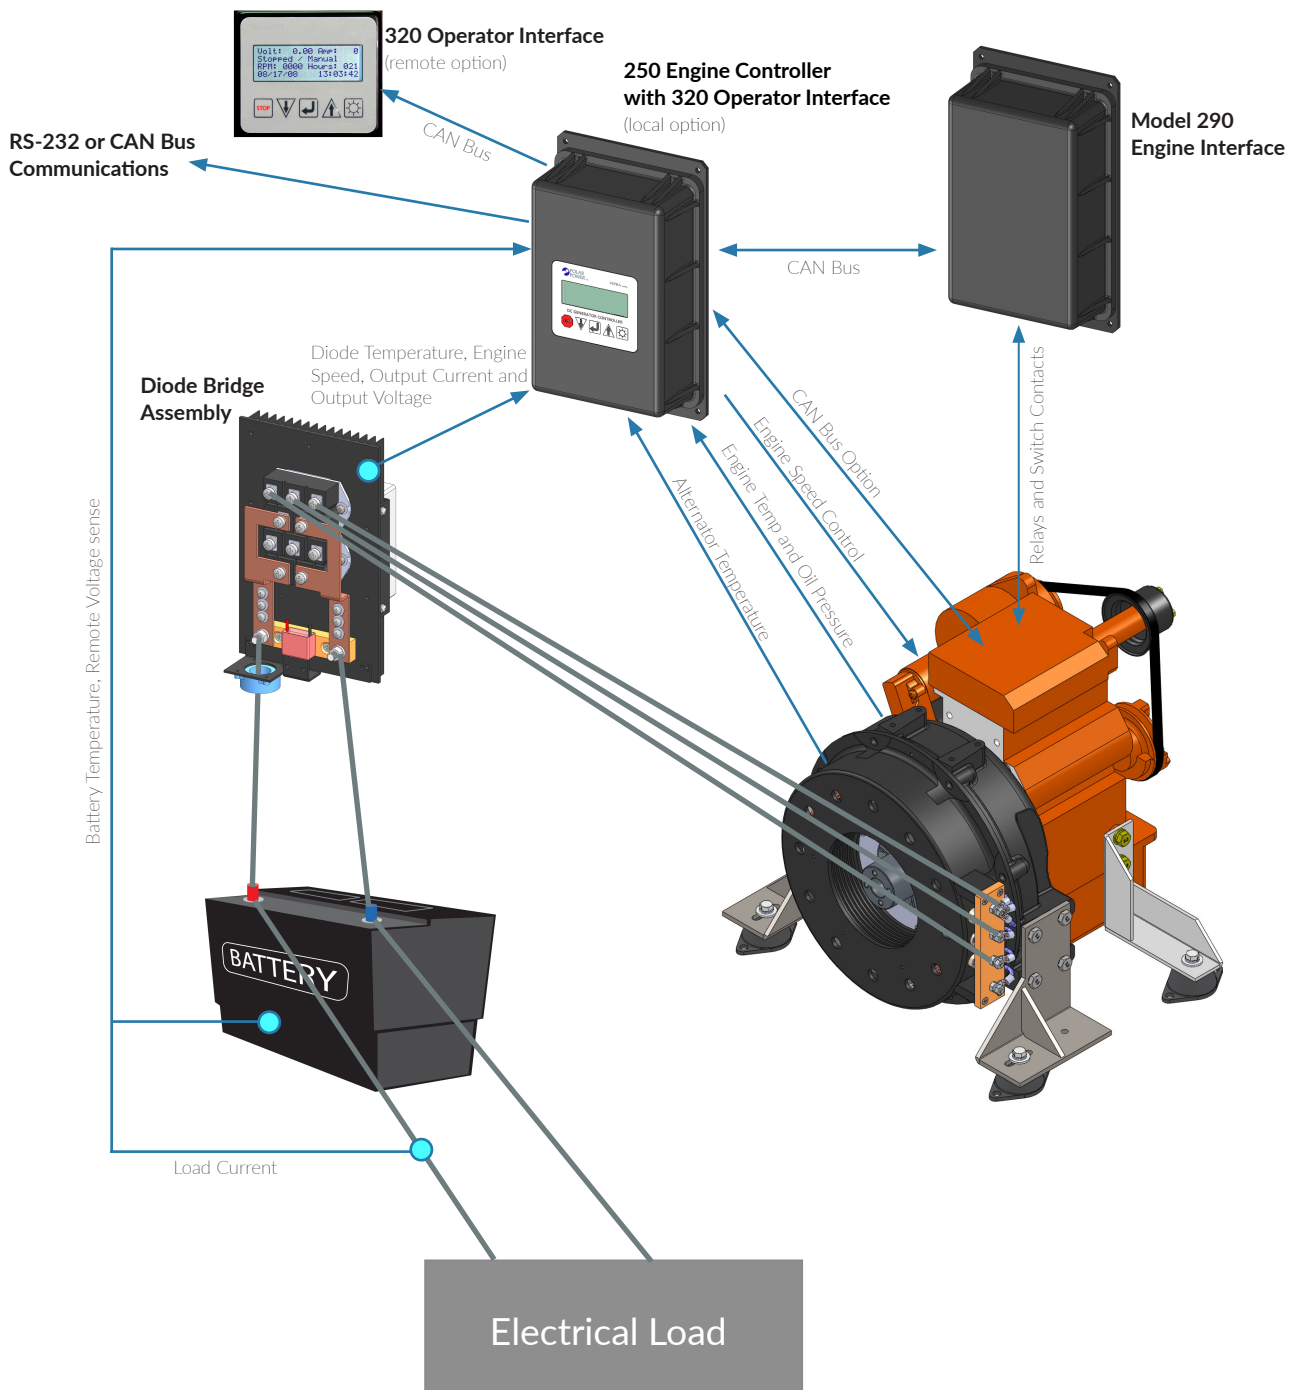

Supra Control System integrates

- Engine Control
- Alternator Voltage Regulation
- Auxiliary Power Inputs
- Operator Interface
- Remote Site Monitoring and
- Communications

The Supra's high level of circuit integration eliminates separate and independent control modules, simplifying the wire harness and eliminating the typical conflicts between modules integrated from different manufactures.

It can be remotely controlled, monitored, calibrated, and tested, through an industrial modem, cell phone modem, or Ethernet. Communication is accessible locally with a PC Laptop or remotely through the Internet to facilitate site support and reduce costly visits to the site.

The Supra Digital Control System provides a complete log of alarms and operating parameters at the completion of a charge cycle or shutdown due to a fault condition. Alarms can be reset and the generator exercised remotely to help identify potential problems before scheduling a site visit. If an unscheduled maintenance is required, the technician can arrive at the site prepared, reducing the need for a second visit.

The Supra Digital Control System facilitates Hybrid Systems incorporating other sources of power including solar, wind, hydro, and utility. All connections to the controllers are through Amp/Tyco Circular C type connectors facilitating onsite repair through controller swapping (plug and play). The controller circuits were designed to meet the most stringent Military and Telecommunications requirements for EMI, EMP, and Ripple. The Supra Controller can meet the requirements of any type of grounding requirement: negative, positive, or float.

Supra Control System features

- Integration of engine control, alternator, and external communications into one control system.
- Precise control of voltage and current.
- **Automatic Warnings** - when certain services are required.
- **Automatic Generator Shut Down** - if certain preprogrammed faults and-or limits are detected.
- Accepts a power input ranging from 12 to 65 volts.
- Communications with a remote terminal, via RS 232, CAN bus, Bell 212 industrial modem, Ethernet, or Cell modem communications.
- Selectable English or Metric units through the control panel or the Graphics User Interface.
- Operator can remotely change the operating program (software) and reconfigure the set-points and calibrations.
- Operator can set the Controller to automatically exercise the generator periodically by inputting the run duration and day and hour of the week or month to run.
- The Controller can call the remote terminal if a failure occurs or send an SMS message depending on the options in place.

- The system can be remotely recalibrated, reset, and used to perform diagnostic tests, and override the STOP, AUTOMATIC, or MANUAL modes.
- Normal runs, alarms, and abnormal shut downs are recorded and kept in the memory. If the memory fills up the oldest events are over written. Up to 2047 events can be permanently stored.
- Operator can view the state and status of the generator, load battery bank, and starting battery using communications port.

Supra Control System description

The Supra Control System integrates the control of the engine, alternator, and external communications into one control system. The Supra Control System consists of the Model 250 Controller and the Model 290 Engine Interface.

The Supra Control System consists of the Model 250 Controller and the Model 290 Engine Interface. The Model 250 Controller provides the control, monitoring, and communications. The Model 290 Engine interface houses the relays and fuses required for automatic engine control. For manual/non-automatic systems the Model 290 is not required.

The Supra 250 Controller accepts a power input ranging from 12 to 64 volts. The 250 is typically connected to the load battery and not the starting battery.

The Model 290 Engine Interface is available in either of two voltage ranges, 7 to 16 VDC or 16 to 64 VDC. The Model 290 can connect to either the 12 volt starting battery or the load battery (with the 16 to 64 volt option) for the logic power. A connection to the starting battery is required for engine functions such as the glow plug, starter, and fuel relay components.

The Model 250 Controller is accessed through the Model 320 Display/Keypad which provides a five push-button control panel and RS-232 or CAN bus ports. The Model 320 Display/Keypad contains a back-lit, dot-matrix liquid crystal display suitable for -20° to 70°C operation.

The Supra 250 Controller usually derives its power from the output connections of the genset up to 65 volts. Alternately, on higher voltage models, the controller voltage is supplied by an auxiliary 24 volt source. Voltage monitoring on the higher voltage models is derived through a voltage divider module.

In the initial setup the user chooses either English or Metric units through the control panel or the Graphics User Interface.

The Model 250 Controller has the capability to communicate with a remote terminal, via RS 232, CAN bus, BELL 212 industrial modem, Ethernet, or Cell modem communications. The user will be able to view the state and status of the generator, load battery bank, and starting battery. The operator can remotely change the operating program and reconfigure the set-points and calibrations. The Controller can call the remote terminal if a failure occurs or send a SMS message depending on the options in place. Remotely, through the software GUI, the system can be recalibrated or reset, perform diagnostic tests, and override the STOP, AUTOMATIC, or MANUAL modes.

The user can set the Controller to automatically exercise the generator periodically by inputting the run duration and day and hour of the week or month to run.

Normal runs, alarms, and abnormal shut downs are recorded and kept in the memory. If the memory fills up the oldest events are over written. Up to 2047 events can be permanently stored.

Supra Control System advantages

1. Optically isolated RS 232 and CAN bus communications allow the generator to be controlled (locally or remotely) through a PC computer with Polar's GUI or the customer's own CAN bus.
2. Precision battery charging using control of both the voltage and current output. Battery charging using a single parameter of voltage control is insufficient because small millivolt changes can cause undesirable, large current fluctuations.
3. User configurable battery charging algorithms for different battery technologies. User configurable: current limit in bulk charge, temperature compensation curves, differentiation of load current and battery charge, and float voltages.
4. Control of Engine: RPM, starter motor, glow plugs, choke, fuel racks, fuel and engine block heaters, and cooling fans. Accurate monitoring of temperatures, pressures, coolant, and fuel levels.
5. Digitally controlled variable parameters: Digital control allows the generators, voltages, currents, engine speeds, and sensor calibrations to be remotely calibrated. All potentiometers were eliminated.
6. Set points and recalibration can be performed remotely through the Internet, RS 232, Ethernet, or Cell Phone Modem using PolarGen Launcher GUI interface.
7. Field upgradeable software.
8. 10 bit A/D converters and optically isolated linear amplifiers provide accurate voltage, current, fuel level, oil pressure, temperature, and engine speed measurements.
9. Sensor and communications ports are isolated, so the failure of an input sensor or communications port will not contribute to system conflicts and issues.
10. High immunity to electrical noise. Sources of noise include the starter motor, spark plugs, lightning, coupling of AC sources, cell phone transmissions, microwave, and radar transmissions.
11. Very low conductance and radiation of EMI: A clean DC Power Source is incorporated for the provisioning of sensors, field coils, and actuators with a resultant effect of a reduced EMI source. This is unlike other controller manufacturers, who typically use an unfiltered PWM source of power.
12. Polar Power's unique circuit provides reliable operation in floating, positive, or negative ground systems. Polar uses switching power supplies to isolate both positive and negative inputs. (Most other controllers use a lower cost 3-pin voltage regulator that creates problems when moving between positive and negative ground systems.)
13. The power supplies input and output signals and is fully isolated for up to 1500 Volts, via opto and galvanic couplers. The Supra Control System can tolerate most Hipot testing with controls connected in place.
14. Superior high voltage and current surge immunity from lightning, alternator surges, and load dumps with active voltage clipping circuits.
15. Supra's microprocessor and relays are able to operate under low voltage conditions during engine cranking with a starting battery in poor condition.
16. AMP/Tyco Circular C type connectors are used to maintain a high degree of reliability and provide ease of field service. Signal pins are gold plated and power pins are silver plated, providing low maintenance operation in high humidity, salt fog, and sandy environments.

17. Model 250 and 290 enclosures are gasket sealed to IP67.

18. Conformably coated circuit boards: all components are soldered in place, except for fuses in the Model 290 module.

Model 250 controller



This module is the heart of the system providing the primary logic control, analog and switches inputs, communication, and the generator output regulation.

The Model 250 Controller has a 15 amp bipolar power supply controlled by the microprocessor to provide the generator's voltage and current regulation. Regulation is achieved either through controlling the field coil as required by the Model 6200 alternators or through an actuator on the engine for speed control as required by the Model 8000 series.

Analog to digital converters read the various engine, alternator, and control sensors for temperature, pressure, voltage, current, and speed.

5 switch inputs to monitor: intrusion, over temperatures, presence of AC grid, solar or wind power, fuel leaks, or other special requirements.

The Model 250 Controller communicates with the 290 Engine Interface, the 320 Operator Interface, and accessory modules through a CAN bus interface.

CAN bus interface is open to users for transmitting operational data or receiving control commands from the user's CAN bus system. The CAN bus protocol is unique to Polar Power.

The Model 250 also has two RS-232 ports. These ports are optically isolated from the system voltage and are used for communicating with the: Model 380 Ethernet module, Cell Phone module, Personal Computer, or other customer devices.

The Model 250 facilitates Hybrid systems incorporating other charging sources of power including solar, wind, hydro, and utility.

Model 290 engine interface




This assembly contains the relays and switched contact inputs for the engine control as required for fully automated operation.

The Model 290 Engine Interface is designed as a separate module to facilitate access to replaceable fuses used to protect the system against catastrophic damage from shorts, over current, or operator error. Starter solenoids, fans, glow plugs, and fuel valves are typical devices that are fuse protected within the 290 module.

Through software, the 8 on board relays and 3 switch inputs can be assigned various functions encompassing: engine speed control, fuel valves, cooling and ventilation fans, engine block heaters, fuel heaters, safety shut down devices, and the normal functions required by a diesel or LPG fueled engine.

Model 320 display/keyboard

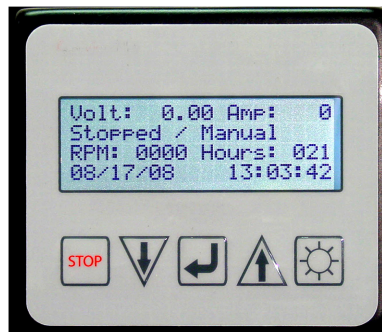

Provides the operator an interface for changing parameters and viewing system status via a 4 line, 20 character display screen. The Model 320 can either be installed on the case of the Model 250 Controller or within its own enclosure. The Model 320 can be located up to 35 meters from the Model 250.

The Graphic User Interface (GUI) allows complete control over the DC generator system. There is the capability to remotely change voltage, current, stop and start parameters, and reset alarms.

Battery monitor, fuel level or pressure, temperature, pressure sensors, voltage, current, oil pressure, oil level, coolant level, enclosure over temperature, air filter restriction, etc. are available to meet the needs of specific applications.

MODEL 250 CONTROLLER

Voltage Control Range

The Supra System can operate generator systems with output voltages of 12 to 600 Vdc. An accessory voltage divider module is required for voltages over 70 Vdc.

Output Power Control Range

There are no maximum power output limitations for Generators operated by the 250 Controller.

Input Voltage

A 16 to 72 Vdc input is required to power the Model 250 Controller. The Model 250 can derive its operating power from the starting battery or the load battery. The load battery is preferred as the Controller's source of power because it is typically a more reliable source than the starting battery. 12 Vdc systems require a boost converter, and for systems over 70 Vdc a buck converter is required to power the Model 250 Controller. Voltage dividers for voltage and power input conditioning are utilized for high voltage generator systems (70 to 600 Vdc).

Low Power Consumption

The Model 250 has very low power consumption requirements are typically less than 2 watts in the idle mode.

Power Required for Engine Speed Control for 8000 Series Alternators

When regulating engine speed, the Model 250 can consume up to 80 watts of power driving the actuator on the fuel rack or the butterfly valve on the carburetor, depending on the type of engine and actuator used.

Power Required for the Field Coil for Series 6200 Alternators

Using a high efficiency DC-DC power supply the Supra can output up to 350 Watts of power for driving the alternator's field coil. The field coil is used to regulate voltage and current output of the generator.

Electrical Isolation

The controller has a total of 8 isolated power supplies for the microprocessor / internal logic, analog to digital conversion, sensor / transducers, and communications. Power supplies are fully isolated on both the positive and negative pathways. This feature is essential for Telecom systems operating in positive ground 48 Vdc systems, but is not present in most other systems.

Communication between modules

The Supra system uses its own CAN bus communication protocol (125 Kbs) to send and receive data and commands to the modules in the system. The Supra Controller uses the Microchip MCP2515.

Upgrades

Serial programming updates with the Polar Boot loader.

Current Measurement

Hall Effect current transducers are incorporated in the design to replace standard shunts for enhanced electrical isolation, precise measurements, and to eliminate the cooling requirement for hot shunt surfaces. The Model 250 Controller has multiple current sensor inputs that can be used for generator, battery, solar, wind, or load measurements.

Operational Environments

The Model 250 is rated at -40° to +60° Celsius. All electronic components used in the circuits are rated for

a minimum service of -40° to 85° C. The microprocessor is rated to 125° C. The control modules can handle a humidity range from 0% to condensing and altitudes up to 14,000 feet.

Durability / Reliability

Power components are de-rated by at least 50% whenever possible (per Military standards). Only 5 electrolytic capacitors are used in the Supra 250 Controller. Avoiding electrolytic capacitors provides term reliability and reliable operation over wide temperature ranges.

Temperature Measurement

A KTY-83 sensor is used for accuracy and enhanced electrical isolation. The 250 Controller has a total of 4 temperature sensor inputs that can be used for engine, alternator, enclosure, and battery temperature compensation.

Pressure Measurement

Solid state pressure transducers (no moving parts) are used to provide high reliability and accuracy. Other pressure senders (Bourdon tube and viable resistor) have a shorter life expectancy, especially on diesel engines. Polar incorporates solid state pressure transducers to measure fuel tank level and oil pressure.

Fuel Level Monitor Option

Polar Power calculates fuel level in the tank by measuring the column weight of fuel in the tank. A very accurate (1%) solid state transducer performs this task through a location outside and at the bottom of the fuel tank. Knowing the weight of the fuel column at the top (full) and bottom (empty) of the tank provides us with a percentage of fuel in the tank. The Supra can provide and display an accurate fuel level for any size tank without relying on mechanical devices. The Supra Controller records the fuel level percent at the start and end of each run cycle. The controller also measures the amount of kilowatt hours produced during the run cycle. Generator efficiency can be easily calculated using these two values. The fuel level option can also alert the operator to theft or leakage of fuel.

Cooling and Enclosure Purging

For safety, the Supra 250 Controller can run vent or radiator cooling fan(s) to remove possible flammable vapors from the enclosure before starting the engine. The Supra 250 Controller also monitors the coolant temperature while the generator has cycled off. If the temperature is above the set point the vent fans will run to cool the enclosure and generator. This will prevent the generator from heating up the enclosure after it has shut down. This feature also extends the life and reliability of the generator. While cycled off and exposed to the Sun, the enclosure's temperature can climb to over 100 C°, the vent fans can automatically cycle on to reduce the temperature.

Kilowatt and Amp Hour Produced

The Supra 250 Controller monitors the voltage and current then accumulates Kilowatt and Amp Hour values in the log file.

Battery Monitor Option

The Battery Monitor harness accessory includes a current transducer, temperature sensor, and two wires for remote voltage sensing. The Battery Monitor remote option also can automatically compensate for line loss.

Digital Switch Inputs


There are 5 optically isolated switch closure inputs for: fuel leak, enclosure intrusion, low fluids (oil and coolant), fire alarm, low fuel, etc.

The CAN Bus


Capable of connecting up to 128 nodes in a daisy chain fashion over a distance of up to 100 meters. Signal inputs and control outputs can be expanded via the CAN Bus.

Engine Speed

Engine Speed is measured through the alternator frequency. Most automatic generators use a magnetic pickup on the flywheel's ring gear to sense speed; however, this creates a maintenance and reliability problem when small chips of steel or other iron particle collect on the tip of the pickup sensor and short the measurement. This is not a problem when using the magnets and stator inside the alternator for engine speed sense.

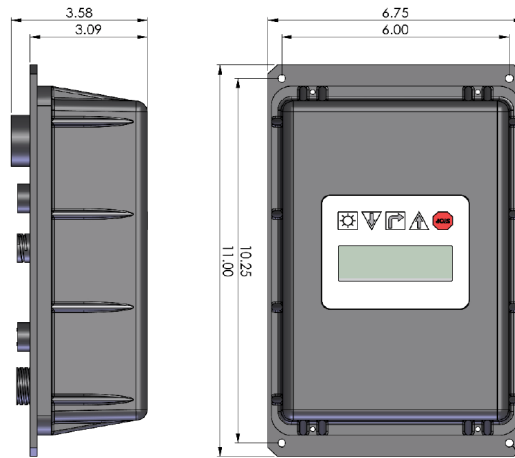

Model 250 controller block diagram

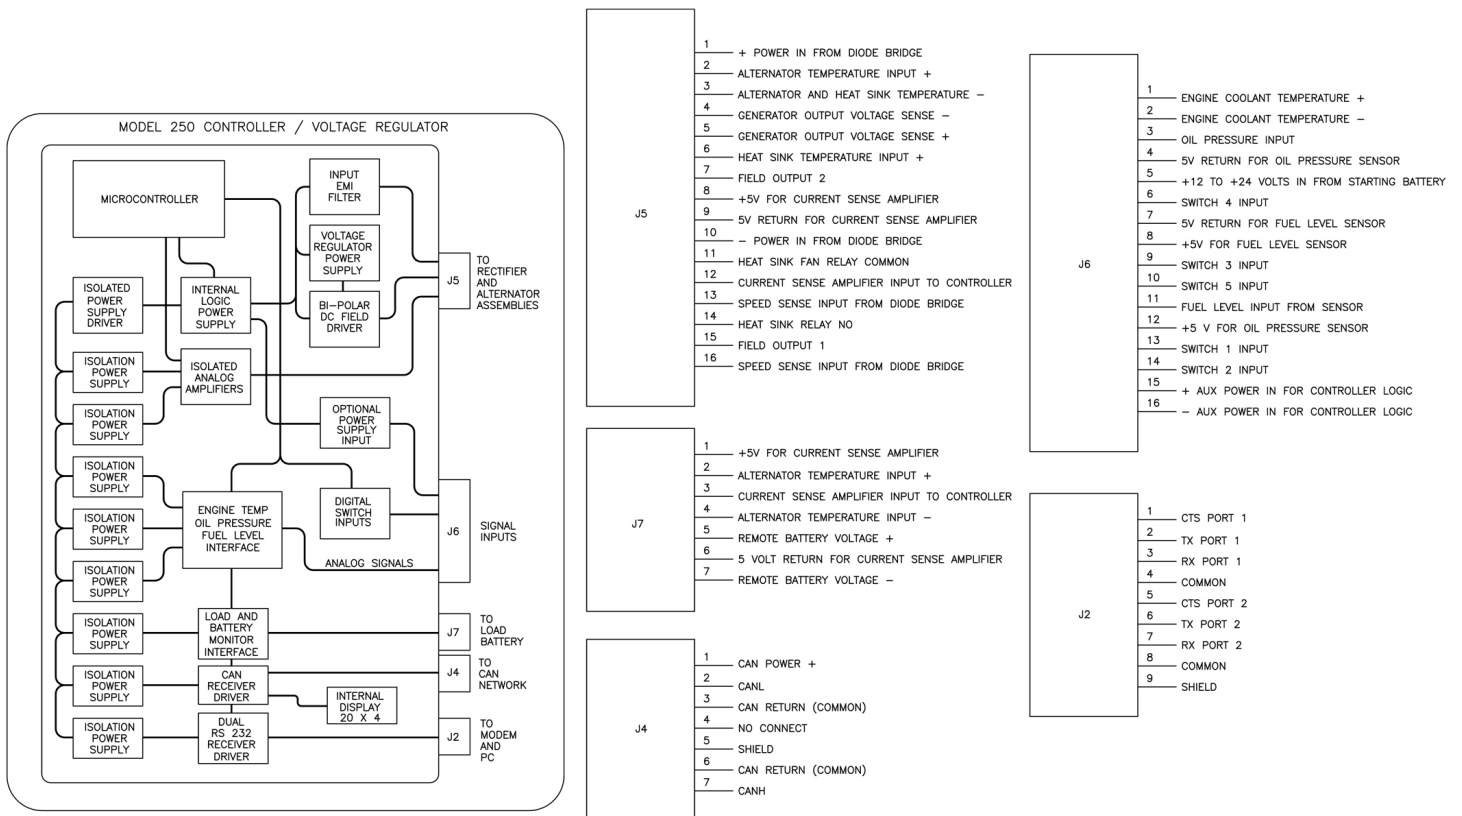

MODEL 290 ENGINE INTERFACE

The Model 290 Engine Interface is the interface between the Model 250 Controller and the Engine it is controlling. The Model 250 Engine Interface module controls the starter, glow plug, and fuel cutoff valve relays that are sized for the load they are to control as well as additional signal relays for functions such as speed control or alarm outputs. The Model 250 Engine Interface also monitors the temperature, oil pressure, and air filter status switches and the starting battery voltage. The Model 250 Engine Interface is connected to the Model 250 System Controller via CAN bus communication.

The internal logic is powered separately and is isolated from the starting battery voltage. Typically, the logic is powered through the Emergency Stop Switch. Removing the power to the logic will disable all relays, removing power to any fuel/speed controls, thus stopping the engine. Power for the glow plug, fuel, and starter is derived from the starting battery through J2 Pin 2. The cooling fan and engine alternator relay power are optionally connected to the starting battery or a separate power source through jumpers J3 and J4.

A block diagram of the Engine Interface appears ahead showing the functional diagram, as well as connector and pin numbers for the module.

Operating Voltage

The Model 290 Engine Interface derives its power from the starting battery and is available in two versions 12 Vdc (7 to 16 Vdc) and 24 Vdc (14 to 32 Vdc). The low voltage capability of the Model 290 allows it to remain in operation during engine starting with a starter battery in poor condition.

Relays

The Model 290 has 8 output relays which are controlled by the Supra 250 Controller via the CAN bus. Multiple Model 290 modules can be daisy chained for increased capacity. Each module has 2 signal relays (Gold plated contacts) for alarms and 6 power relays (Silver plated contacts) that can be used for: speed controls, cooling fans, ventilation louvers, ignition, fuel racks, pumps, solenoids, block and enclosure heaters, starter, glow plugs, as well as other system needs. Relay field coils are monitored for open and shorted circuits.

Fuses and Switch Currents


Power relays have dedicated fuses on the output for safety and system reliability. The 290 module has two 70 amp current relays with fuses, one 40 amp relay with fuse, two 10 amp relays with fuses, and one 10 amp relay without a fuse. There are also two signal relays, which are rated at 1 amp and are without fuses.

Analog Input

The Model 290 measures starting battery voltage.

Digital Switch Inputs


There are 3 optically isolated switch inputs used for over temperature, oil, and air filter restriction.

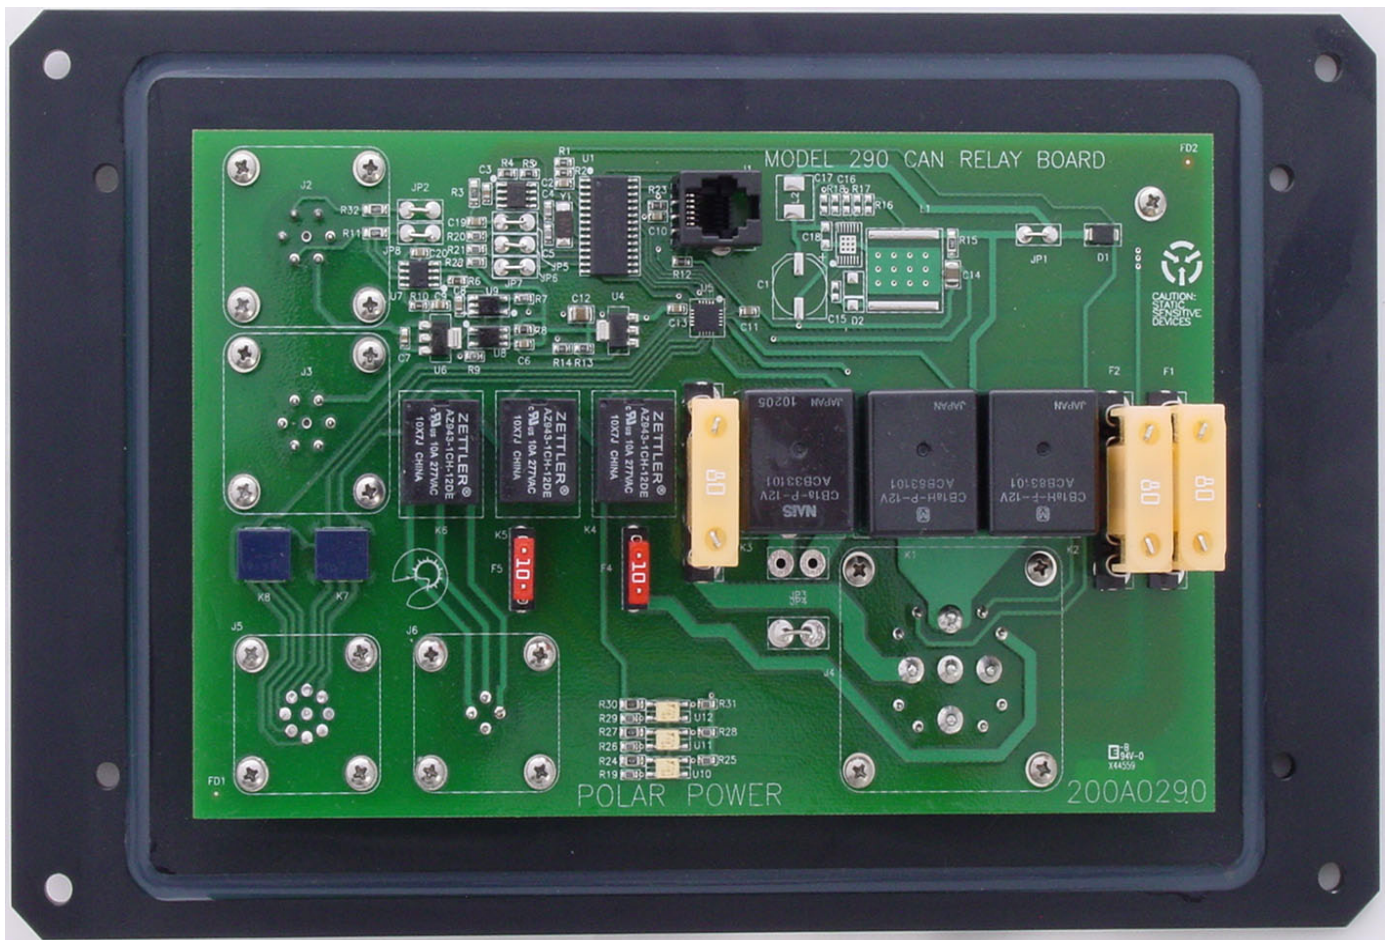

The replaceable fuses are shown in the internal view of the Model 290 Engine Interface. Access to the fuses is possible by removing the 4 screws that attach the cover to the main panel.

Model 290 engine interface block diagram

MODEL 290 ENGINE INTERFACE

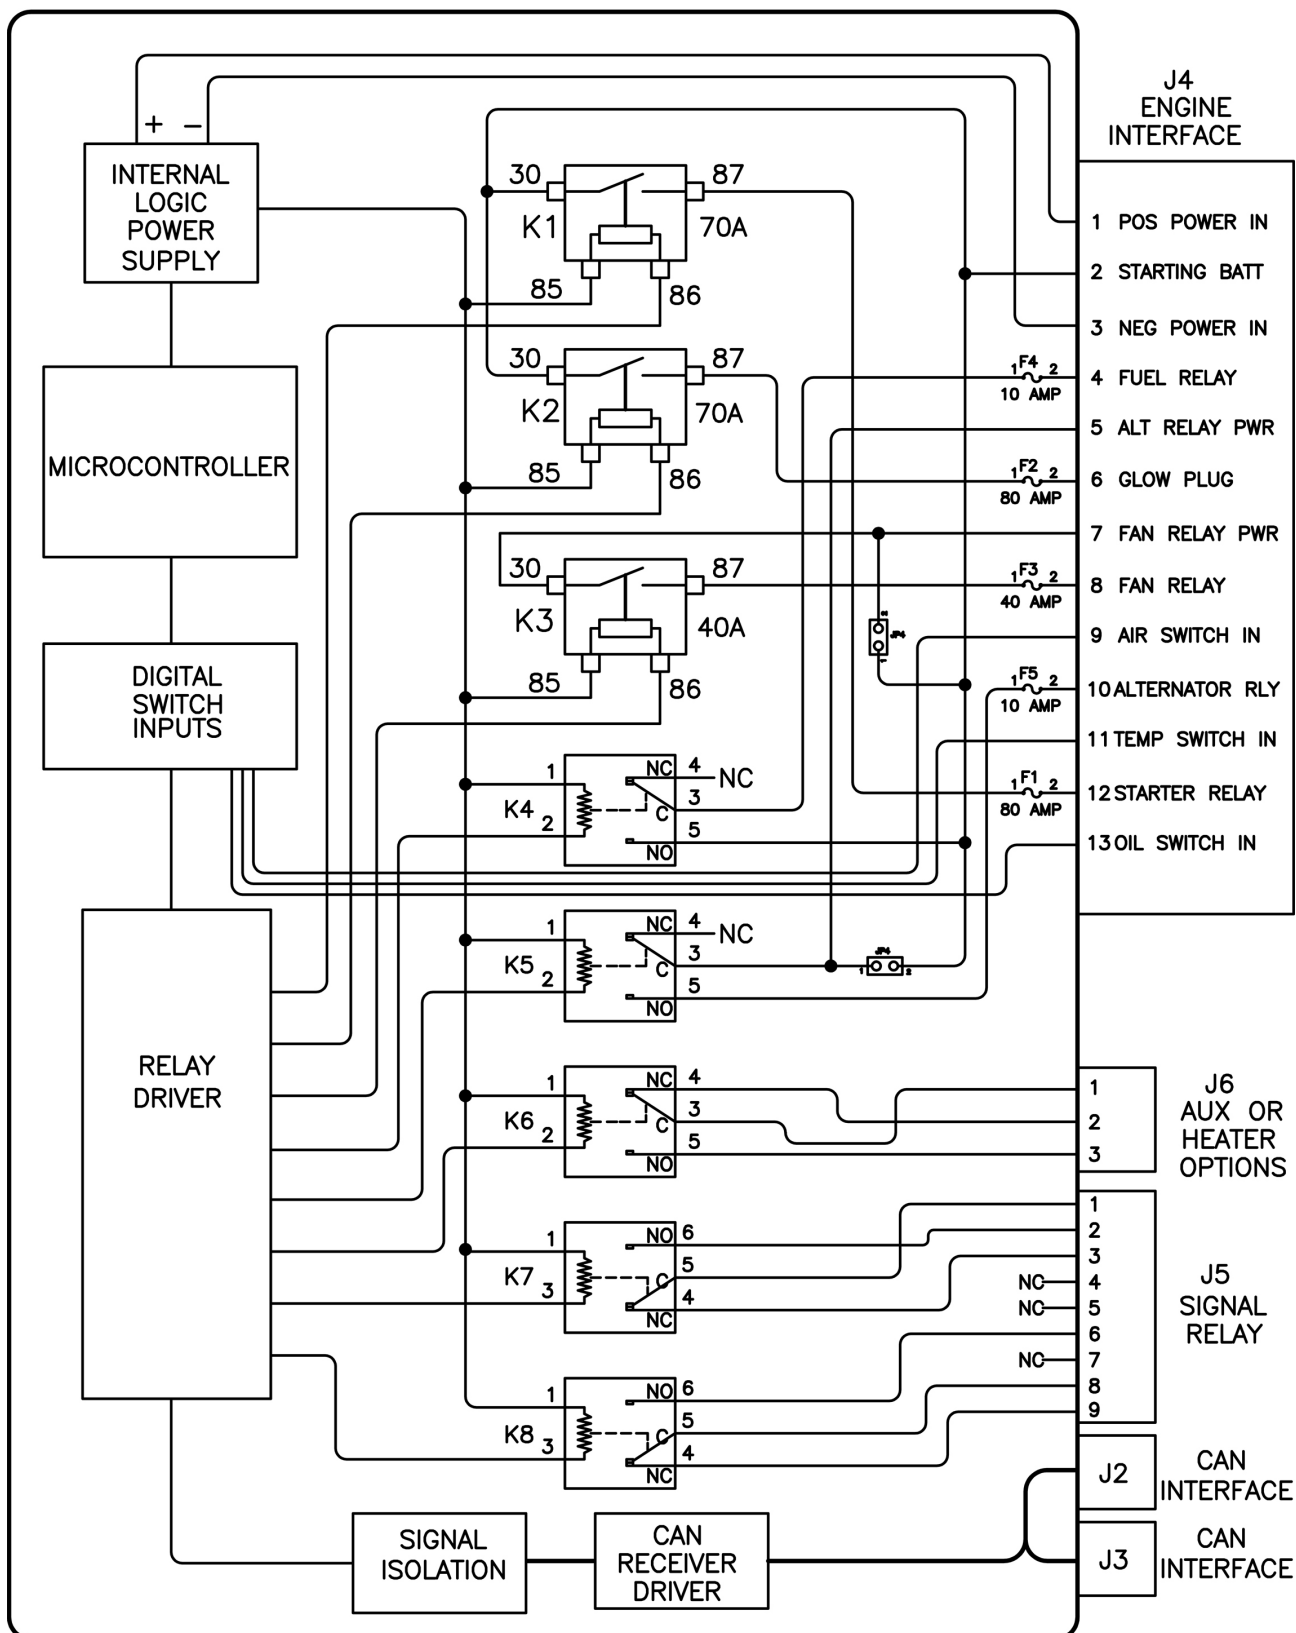

MODEL 320 DISPLAY/KEYPAD

Characters: 7 or 8 data bits

- Parity: Odd, Even, None
- Stop Bits: 1 or 2
- Modem Control Signals: CTS, RTS, DTR/DCD
- vFlow Control: XON/XOFF (software), CTS/RTS (hardware)
- Programmable IO: 3 GPIO pins (software selectable)

Indicators (LED)

- Link & Activity indicator

Security

- SSLv3 and SSHv2 Client & Server, Selectable 128/256/512/1024 Bit certificates
- Encryption: AES, 3DES and RC4
- Authentication: SHA-1, MD5, Base-64 User Access Lists

The LCD Display on the Model 320 is backlit with white LEDs. Backlight is switch controlled for on/off and brightness.

The CAN bus allows the Model 320 to be located up to 100 meters away from the Model 250 Controller. The Model 320 is powered through the CAN bus power.

MODEL 380 ETHERNET INTERFACE MODULE

The Model 380 Ethernet interface module option connects to the RS-232 port on the Model 250 Supra Controller and provides the means of connecting to a hub or switch. Features include:

- Password security for access restriction to the generator
- Serial to SNMP Version 2c or 3 conversions Dual path communication for SNMP data and Polar GUI Interface
- Opto-couple isolation between the RS-232 and the Ethernet output
- Power input is fully isolated, 8 to 65 Vdc.

On-board memory

8MB SDRAM/16MB Flash

Serial Interface

Software selectable data rates from 300 to 921kbps

VIP Access™ Enabled

Seamless integration with ManageLinx™ remote service enablement platform

Software

- Windows 98/NT/2000/XP/Vista-Based Device Installer™
- ComPort Redirector™
- Secure ComPort Redirector

Management

- Internal Web Manager (SSL Option for secure login)
- CLI (over Serial Ports, Telnet or SSH)
- XML Configuration Records via CLI or FTP
- DeviceInstaller™ software
- Firmware: Upgradeable via FTP, Web, and Serial Port
- Flash wear leveling and erase cycle statistics
- Internal Web Server
- Customizable with CGI
- Web content on local file system and updatable through FTP

Power

9 Vdc to 72 Vdc Fully isolated to 1500 Volts

Environmental

Extended Temp: -40° to 85° C (-40° to 185° F)

Regulatory Approvals

- FCC Part 15, Subpart B, Class B – ICES-003 Issue 4 (2004), Class B
- EN55022:2006 and EN55024:1998 + A1:2001 + A2:2003
- AS/NZS CISPR22:2006
- VCCI V-3/2009.04
- EN 61000-3-2:2006, EN 61000-3-3:1995+A1:2001+A2:2005

OPERATING THE SUPRA CONTROLLER

The SUPRA Controller is easy to set up and operate.

There are two methods to enter the parameters:

1. The Model 320 Display with Keypad (mounted on the 250 controller or remote (Note: not all features are accessible with the Display)).
2. A personal computer connected directly or via Ethernet.

Operation with Model 320 display/keypad

The Control Panel is connected to the Supra Controller through the CAN bus. The Model 320 Display/Keypad consists of a 20 x 4 line backlit display and a 5 button keypad.

The functions of the 5 buttons from left to right are as follows:

Stop. Pushing the stop button will stop the engine and return the display screen to the home position. The stop button will also place the generator in the manual mode.

Down arrow. The down arrow provides 2 functions: move the cursor down one line on the display and decrease a value when a menu item is selected.

Return. This button acts much the same as the enter key on a PC. Pushing this button will act on the menu selection or operation on the display.

Up arrow. The up arrow provides 2 functions: move the cursor up one line on the display and increase a value when a menu item is selected.

Back light intensity control. This button steps through four levels of back light intensity. Off is one of the intensity levels.

Operation with a personal computer (PC)

A PC can be connected to the model 250 Controller through a direct cable connection or remotely through a modem or Ethernet connection.

There is a Graphics User Interface program that allows access to all parameters of the Supra Controller.

CONTROL SEQUENCE OUTLINE

Start sequence

The Supra Model 250 Controller can initiate a generator start from several sources. They are: In manual mode, control panel, from a Personal Computer through the GUI (Graphics User Interface), through the internet or phone system (with the optional interfaces), switch input, or automatically in automatic mode.

In **Manual Mode**, the generator is forced to start except when there are fault conditions such as engine over temperature or other alarms that would be detrimental to the operation of the engine. The engine start sequence is the same whether in automatic or manual mode, except for the origin of the source for the start command.

1. In the **Automatic Mode** the Supra Model 250 Controller will monitor load battery voltage and any external start signals. If any of these user defined conditions are met, the controller begins the start sequence.
2. In **Manual Mode** the start sequence will be initiated by commands from the Model 320 Display/Interface, PC, or remotely.
3. In **Automatic Mode** the start sequence will be initiated by conditions meeting the parameters set in the controller such as low battery voltage, exercise cycle, or the users system input signal.
4. During the pre-start sequence the Model 250 Controller checks all sensors and conditions such as over temperature or any other alarm condition that would cause an immediate shut down.
5. Typically on a Diesel engine, the glow plugs, fuel relay, and alternator are activated.
6. During the glow plug timing, the **Buzzer** will sound indicating an imminent engine start.
7. After the glow plug timer has expired, the starter will be engaged. The starter will crank until either the engine RPM reaches the **Starter Cut Off** value (indicating an engine start) or until the crank timer has timed out (indicating an engine start failure).
8. If there was an engine start failure, the Model 250 Controller will go into a **Crank Rest Period**. At the end of the **Crank Rest Period**, the 250 Controller will again crank the engine. The Controller will attempt to start the engine as many times as set in the **Crank Attempts** setting. If the engine failed to start after the **Crank Attempts** count goes to zero, the alarm flag will be set, and no further attempts will be made to start the engine.
9. When the engine RPM has reached the **Starter Cut Off** value (indicating an engine start) cranking will stop and the engine cooling fan relay will be enabled. The diode bridge heat sink will also be enabled through a separate relay.
10. The Model 250 Controller will then go into an engine warm up cycle whose time is determined by the **Warm-up Delay** value set in the Controller. During this period, the engine RPM is controlled by the value set in the **Idle RPM parameter** and minimal power is generated. Low oil pressure will be ignored during the time the **Low Oil Ignore** timer is running. After this timer expires, the oil pressure is then monitored. If a low oil pressure is sensed after this period, the engine will immediately shut down with a **Low Oil pressure alarm**. After the engine start, the internal engine run timer is started.
11. After the **Warmup Delay period**, the generator output voltage will ramp up to the **Power Limit Parameters** set in the **Alternator Settings Page**. This ramp up is performed to allow the engine to respond to the load increase over a period of seconds.

12. If the engine fails to start it enters a **Rest Cycle** that is adjustable from 1 to 300 seconds.
13. If the engine fails to start after several start/rest cycles, the system enters a **FAULT** condition and will prevent the engine from retrying the start sequence until the fault is cleared. **This fault may be cleared locally or remotely by toggling between the automatic and manual modes of the controller.**
14. If reset remotely, and the engine again fails to start, diagnostics and LOG information may be helpful in determining the problem.

Shutdowns and Fault conditions

There are two classes of error conditions:

1. A **Fault** is a condition where the controller is required to shut down the engine. Low oil pressure, over temperature, failed start and engine over-speed are conditions where the system needs an immediate engine shut down. With the battery monitor option, an over temperature condition on the load battery will cause the engine to shut down as well. However, when the battery temperature returns to a safe level, the engine will be allowed to restart.
2. A **Warning** condition is an alarm for maintenance. Low fuel, air-filter and starting battery maintenance issues only require operator notification through a warning alarm. Engine and alternator high temperature conditions can be managed by reducing output power.

When any of the **Fault Conditions** arise, the appropriate **Fault Name** is shown on the Model 320 Display/Keypad. If the fault condition calls for a **Shutdown**, the engine is signaled to shut down immediately by turning off the ignition, fuel rack, and/or fuel pump/valve. The **Fault Name** is activated on the **Model 320 Display/Interface** and if the modem is present, a remote call is made.

When a **Warning Condition** is satisfied, there is no action taken to shutdown the system. An **Alarm Name** is displayed on the **Model 320 Display/Interface**. If the modem is present a remote call is made.

When a **Fault** occurs, the Model 250 Controller stores the fault condition and all the system's data values at the time of shut down. The information stored at the time of the shutdown is described in the **Log Status Page**.

Condition	Fault	Warning	Controller action
Low oil pressure	X		Engine Shutdown. K8 Fault Relay activated
High temperature *	X		Engine Shutdown. K8 Fault Relay activated
Over RPM	X		Engine Shutdown. K8 Fault Relay activated
Failed start	X		K8 Fault Relay activated
Oil change		X	K7 Warning Relay activated
Oil filter change		X	K7 Warning Relay activated
Air filter change		X	K7 Warning Relay activated
Starting battery service		X	K7 Warning Relay activated
Fuel filter change		X	K7 Warning Relay activated
Engine temperature *		X	Decrease current output. K7 Warning Relay activated
Alternator temperature		X	Decrease current output. K7 Warning Relay activated
Rectifier temperature		X	Decrease current output. K7 Warning Relay activated
Battery temperature		X	Decrease current output. K7 Warning Relay activated
SW1		X	K7 Warning Relay activated
SW2		X	K7 Warning Relay activated

*Note: The Engine Temp. Warning and Engine High Temp. Fault depends on different temperature values. Additionally, both conditions result in different actions taken by controller.

Stop sequence

The Supra Model 250 Controller offers a combination of five modes of shutdown:

1. **Complete the Charge Cycle** - For the bulk charge shutdown, the 250 Controller will monitor the battery charging voltage and the battery charging current. If the voltage has reached the **High Voltage Stop** value and the charging current has reached the **Low Current Stop** value, an auto-stop sequence commences.
2. **Restoration of AC (utility) Power** - If the 250 Controller is configured to run whenever the utility power is unavailable, it will begin a shut down when power is restored.
3. **Complete Automatic exercise/test.**
4. **Fault Mode** - This stop mode does not go through the normal shut down sequence, instead immediately stops the engine and enters Fault Mode.
5. **External Command from an Operator.** This stop command can come from the 320 Display/Keypad, a PC connected directly or remotely, or a switch input if so configured.


During a normal shut down sequence in automatic mode, the Model 250 Controller will enter this sequence:

1. The **generator regulator** is ramped down and power output is reduced.
2. The Controller enters an engine cool down delay determined by the **Cooldown Delay** parameter set in the Alternator Settings Page.
3. The internal "**hour meter**" stops accumulating time.
4. All **Log Data** is stored in non-volatile memory.
5. When the **Cooldown Delay** expires, the engine relays for running are disabled.
6. The starting battery alternator (if so equipped) will be turned off when the engine RPM drops below the **Starter Cut-Off** value.
7. After the engine stops, the 250 Controller reverts to monitoring the load battery in preparation for the next run.

USING THE POLAR POWER GUI SOFTWARE

This is a general overview of the Polar Power Genset Controller Software for use with the Model 250 Controller.

Main status screen

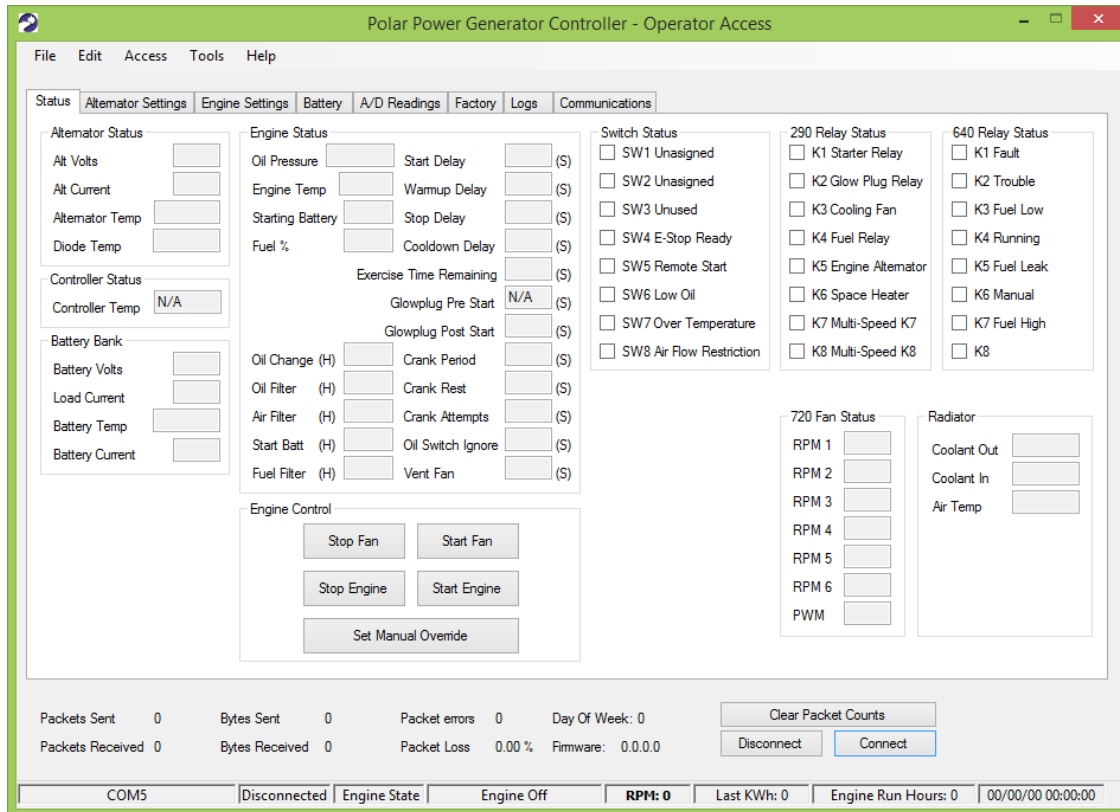

The Polar Power GUI (Graphics User Interface) software is downloaded and installed from a server through the Internet. To access the software, the computer must be configured as follows:

- The computer must have .NET 2.0 installed
- The login account must be set to Administrator for Vista, 7, or 8
- All proper drivers must be installed for the USB to Serial interface.

Once the program is installed, the software displays the above screen. Each time the program is launched, if an internet connection is available, the software will check for the latest software version and update the version installed on the computer. If an internet connection is not available, the program will start up directly.

Upon start-up of the application, it will be at the “Status” screen. This will be the most common screen used for monitoring the operation of the Genset.

If an Internet connection is not available for first time installation, an executable file can be downloaded or copied from a Memory Stick containing this program.

Menus common to all screens

The basic GUI window consists of several **Pull-Down Menus** and display tabs at the top as well as status information at the bottom of the screen.

The top **Pull-Down Menus** are:

File:	Used to exit the program
Edit:	Used to edit computer to controller serial settings
Access:	Used to change the GUI operator level and password
Tools:	Used to reboot the Model 250 Supra controller
Help:	Controller firmware and software versions

Network Status Information

The network status information located towards the bottom of the screen consists of the following items:

- **Packets Sent** - The number of information packets sent from the PC/Laptop to the 250 Controller
- **Bytes Sent** - The number of bytes of information sent from the PC/Laptop to the 250 Controller
- **Packets Received** - The number of information packets received from the 250 Controller
- **Bytes Received** - The number of information bytes received from the controller
- **Packet Errors** - The number of packets that have been re-sent due to different things. Due to: 1) Too fast of a refresh rate, 2) when "Saving" an item, the controller may seem to "hang" for a few seconds, increasing the counter, 3) Line noise from some outside source
- **Packet Loss** - Percent of packets loss.
- **Day of the Week** - Displays the day of the week.
- **Firmware** - Displays the firmware version of the Model 250 Supra controller connected.


Controller Status Information

The network status information located at the very bottom of the screen consists of the following items:

- **COM Information** - Used for scheduling run times for the generator.
- **Connected or Disconnected Status**
- **Engine Run Status** - Engine running or stopped.
- **RPM** - The current RPM of the engine.
- **Last KW hours** - The KW hours produced during the last engine run cycle.
- **Engine run hours** - Total engine run time in hours.
- **Date and time** - Used to provide a time stamp for log information.

Communications page


The communications page is available by clicking on: **Edit**, then selecting **Preferences**.

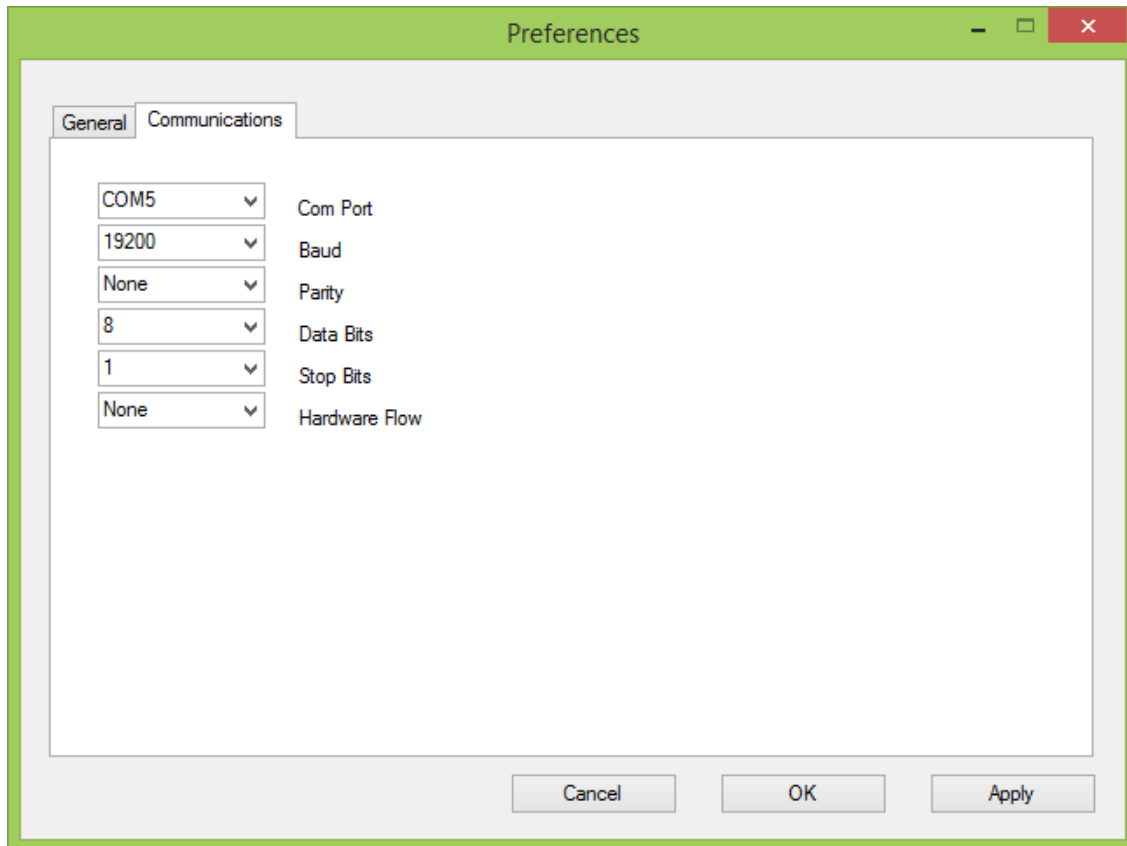

- **Com Port** - Select the Com Port you wish to use on the PC or Laptop. Ranges from 1 to 15
- **Baud Rate** - Leave at 19200
- **Parity** - Leave at None.
- **Data Bits** - Leave at 8.
- **Stop Bits** - Leave at 1.
- **Hardware Flow** - Leave at Hardware.

General page

The General communications page is available by clicking on: **Edit**, then selecting **Preferences**, then select the **General** tab.

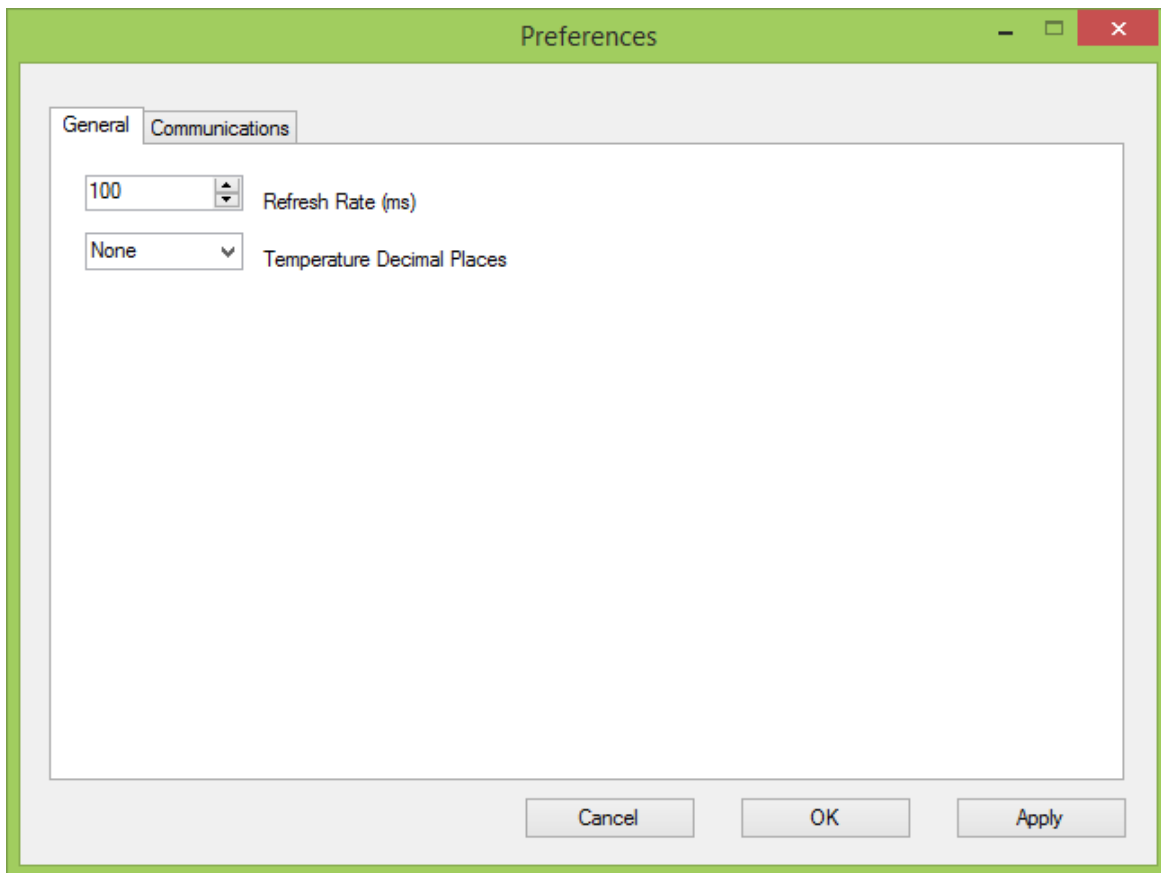

Refresh Rate (ms) - How fast you wish the controller to update one item on the screen you are displaying. This adjustable rate has been built in for some laptops using the USB to Serial adapter which may cause high error correction rates.

Temperature Decimal Places - Controls the number of decimal places shown for temperature values.

Status page

Alternator Status Group Box

Alt Volts - Voltage measured on the output of the diode bridge assembly.

Alt Current - Amperage measured at the output the diode bridge assembly. This value is the total amperage generated by the alternator.

Alternator Temp - Temperature Sensor mounted on the alternator.

Diode Bridge Temp - Temperature Sensor mounted on the diode bridge.

Controller Status Group Box

Controller Temp - Temperature Reading of the Supra controller.

Battery Bank Group Box (optional package)

Battery Volts - Remote voltage reading taken from the battery bank terminals.

Load Current - Total amperage delivered to the load. This is a reading of the current sensor located between the battery bank and the load.

Battery Temp - Temperature as measured on the battery bank. Temperature units are Fahrenheit when the Display Units are in English and Celsius when the Display Units are in Metric.

Battery Current - Total amperage flowing into the battery bank. This current is derived by subtracting the load current from the alternator current.

Engine Status Group Box

Oil Pressure - Actual engine oil pressure displayed in PSI or BAR depending on the selection of the English/Metric switch.

Starting Battery - Voltage of the engine starting battery. This voltage is available when the generator system includes an engine interface module.

Fuel % - Percentage of fuel remaining.

Oil Change/Oil Filter/Air Filter /Starting Battery/Fuel Filter - Time remaining in hours to service or change component.

Start Delay - Time in seconds remaining before the engine will start when in automatic mode and the start voltage is below the set-point.

Warmup Delay - Time in seconds remaining (after the engine has started) until the controller commands the generator to produce the desired voltage and current.

Stop Delay - Time in seconds remaining before the engine will stop when in automatic mode and the conditions for normal shutdown are satisfied. Conditions are usually satisfied when the output voltage is equal to or greater than the set voltage and the battery charging current is below the low current stop value.

Cool down Delay - Time in seconds remaining before the engine will come to a complete halt when the Stop Delay conditions have been met. The generator will be at an idle with minimal output of the alternator during this delay period.

Exercise Time Remaining - Time in minutes remaining on the exercise run time.

Glow plug Pre Start - The time in seconds to run glow plugs before engine start. 29 seconds max.

Glow plug Post Start - The time in seconds to run glow plugs after engine start. 29 seconds max.

Crank Period - The time in seconds remaining in the crank cycle. This timer will count down while the engine starter is engaged. The starter will be engaged until the engine RPM reaches the starter cut-off RPM value.

Crank Rest - The length of time in seconds that the controller will wait before trying to crank the engine on a failed start.

Crank Attempts - The maximum number of times remaining that the controller will attempt to start the engine following a failed start.

Oil Switch Ignore - The length of time in seconds the controller will ignore the Oil Pressure switch, to allow for the buildup of pressure in the oil system after an engine start.

Vent Fan - The length of time for fan to run before engine start and after engine stop; helps to purge cabinet of residual fuel vapors.

Switch Status Group Box

SW1 Fuel Leak / User Defined - Warning switch for fuel leak if option is present on generator set. Warning switch can be used for any purpose specified by user. Custom Text can be set from the communications page.

SW2 Door Open / User Defined - Warning switch for generator door open if option is present on generator set. Warning switch can be used for any purpose specified by user. Custom Text can be set from the communications page.

SW3 Unused / User Defined - Warning switch can be used for any purpose specified by user. Custom Text can be set from the communications page.

SW4 Emergency stop switch - Indicates if the Emergency Stop switch is depressed.

SW5 Remote Start - Manual over-ride switch or remote start switch.

SW6 Low Oil - Status of the oil pressure switch. A check mark indicates the oil pressure switch is activated (low pressure). If the engine is running, and the oil switch ignore timer has expired, the engine will shut down within 1 second after this switch is activated.

SW7 Over Temperature - Status of the engine temperature switch. A check mark indicates the engine over-temperature switch is activated. If the engine is running, the engine will shut down within 1 second of this switch being activated, and will prevent the engine from starting while the switch is activated.

SW8 Air flow Restriction - Status of air flow through the air filter. A check mark indicates the switch is closed, and there is reduced air flow. This switch will not stop the engine from running.

Switch Status Group Box

K1 Starter Relay - Switch displays while Starter is engaged.

K2 Glow Plug Relay - Switch displays while Glow Plugs are running.

K3 Cooling Fan - Switch displays while Fans are running.

K4 Fuel Relay - Switch displays while fuel valve is open and allowed in the engine.

K5 Engine Alternator - Switch displays while Alternator is running.

K6 Space Heater - Switch displays when...

K7 Multi-Speed K7 - Displays when a warning is triggered.

K8 Multi-Speed K8 - Displays when there is a fault or engine fails to start.

Engine Control Group Box

Stop Fan - Stops the engine cooling fan from running.

Start Fan - Starts the cooling fan.

Start Engine - Starts the engine when the controller is in Manual Mode only.

Stop Engine - Stops the engine from running, no matter what state it is in.

Set Auto/Manual Mode - This button places the controller into either automatic or manual mode. When set manual mode is pressed, the controller will switch to manual mode and the box will now indicate set automatic mode. When set automatic mode is pressed, the controller will switch to automatic mode and indicate set manual mode. In automatic mode, the controller will respond to the settings in the Alternator and Engine Settings page to determine when to start or stop the engine. In manual mode, the controller will ignore the Low Voltage Start, High Voltage Stop, and Low Current settings, and will allow the "Start Engine" button to be pressed to start the engine.

Alternator settings page

Polar Power Generator Controller - Operator Access

File Edit Access Tools Help

Status Alternator Settings Engine Settings Battery A/D Readings Factory Logs Communications

Max Voltage 0.00 Set
 Max Current 0.00 Set
 Low Volt Start 0.00 Set
 High Volt Stop 0.00 Set
 Low Current Stop 0.00 Set

Display Units Metric Set

Over Temp Power Reduction
 Engine Temp 0 Set
 Alternator Temp 0 Set
 Rectifier Temp 0 Set
 Battery Temp 0 Set
 Internal Temp 0 Set

Hour / Minute / Second
 1 1 1 Set
 1 1 8 1 Set
 Month / Day / Year / Day of week

Warmup Delay (S) 0 Set
 Cooldown Delay (S) 0 Set
 Engine Start Delay (S) 0 Set
 Engine Stop Delay (S) 0 Set

3-Speed
 Speed 1 Upper Amps 0 Set
 Speed 2 Lower Amps 0 Set
 Speed 2 Upper Amps 0 Set
 Speed 3 Lower Amps 0 Set
 Speed Current Limit % 0.00 Set

Weekly / Monthly Exercise
 Rate None
 Day
 Duration 0 (M)
 Time 0 0 Hour / Minute
 Set

Refresh

Packets Sent 0 Bytes Sent 0 Packet errors 0 Day Of Week: 0
 Packets Received 0 Bytes Received 0 Packet Loss 0.00 % Firmware: 0.0.0.0

Clear Packet Counts
 Disconnect Connect

COM5 Disconnected Engine State Engine Off RPM: 0 Last KWh: 0 Engine Run Hours: 0 00/00/00 00:00:00

Max Voltage - The maximum output voltage produced by the genset.

Max Current - The maximum amperage the genset will be limited to.

Low Volt Start - The voltage level to which the battery bank must discharge to before triggering the countdown timer from the Engine Start Delay setting.

High Volt Stop - The voltage level the output of the genset requires before engaging the Engine Stop Delay countdown timer. The combination of the High Voltage Stop and Low Current Stop parameters must be met to start the shutdown sequence.

Low Current Stop - The Amperage that the output of the genset falls below before starting the countdown timer for Engine Stop Delay setting. The combination of the High Voltage Stop and Low Current Stop parameters must be met to start the shutdown sequence.

Display Units - English or Metric temperature (degrees F or C) and pressure (PSI or BAR) measurement units.

Warm-up Delay - The amount of time in seconds to have the engine "warm up" before engaging the generator set to produce full power.

Cooldown Delay - The amount of time in seconds to have the engine “cool down” after the completion of a run cycle by idling and producing minimum power.

Engine Start Delay - The amount of time in seconds the battery bank is required to be below the Low Volt Start setting.

Engine Stop Delay - The amount of time in seconds for the generator to continue producing power once the High Voltage Stop and Low Current Stop values have been met.

Over Temp Power Reduction

Engine Temp - Set the temperature reading at the engine sensor, once reached the genset will lower RPM.

Alternator Temp - Set the temperature reading at the alternator sensor, once reached the genset will lower RPM.

Rectifier Temp - Set the temperature reading at the rectifier sensor, once reached the genset will lower RPM.

Battery Temp - Set the temperature reading at the battery sensor, once reached the genset will lower RPM.

Internal Temp - Temperature of the Controller. NO LONGER USED.

Hour/Minute/Second Group

This group is used to set the time/date real time clock.

Hour: 24 hour format (must not be a 0)

Minute: 1 – 59 minutes

Second: 1 – 59 seconds

Month: 1 – 12

Day: 1 - 31

Year: 01 – 99

Day of Week: 1 equals Sunday, 2 equals Monday, 3 equals Tuesday, etc.

3 Speed Group

Used on gensets with the 3 speed option, this group sets the power level vs. RPM parameters.

Speed 1 Upper Amps - The value above which will cause the engine RPM to be increased to the speed 2 level. The current is limited while the generator is increasing in RPM so as to not overload the engine. When the engine reaches the next RPM level, the output current is ramped up to that next level.

Speed 2 Lower Amps - The value below which will allow the engine RPM to decrease to the speed 1 RPM setting. This value must be lower than the Speed 1 Upper Amps value to prevent hunting of the speed control.

Speed 2 Upper Amps - The value above which will cause the engine RPM to be increased to the speed 3 level. The current is limited while the generator is increasing in RPM so as to not overload the engine. When the engine reaches the next RPM level, the output current is ramped up to that next level.

Speed 3 Lower Amps - The value below which will allow the engine RPM to decrease to the speed 2 RPM setting. This value must be lower than the Speed 1 Upper Amps value to prevent hunting of the speed control.

Weekly/Monthly Exercise Group

Rate - None, weekly, biweekly, monthly. Pull-down menu to select the exercise rate.

Day - When weekly is selected, the pull-down choices are Sunday through Saturday. When Monthly is selected, the choices are 1 through 31.

Duration - How many minutes the engine will run for this exercise.

Time - The time of day that the exercise will start.

Engine settings page

The screenshot shows the 'Polar Power Generator Controller - Operator Access' window. The 'Engine Settings' tab is selected. The interface includes a menu bar (File, Edit, Access, Tools, Help) and a tab bar (Status, Alternator Settings, Engine Settings, Battery, A/D Readings, Factory, Logs, Communications). The main area contains various settings for the engine, including RPM values, time delays, and maintenance intervals. A 'Refresh' button is located at the bottom right of the settings area. The bottom status bar displays communication statistics, engine state, and run hours.

Setting	Value	Unit	Action
Starter Cut-Off RPM	500	RPM	Set
Idle RPM	1000	RPM	Set
Max RPM	3600	RPM	Set
Vent Fan Delay	0	(S)	Set
Crank Time	0	(S)	Set
Crank Rest Time	0	(S)	Set
Crank Attempts	0		Set
Low Oil Ignore	0	(S)	Set
Glowplug Post Start	0	(S)	Set
Auto Vent Temp	0	(C)	Set
Fuel Tank Settings	0		Set
Fuel Alarm Level	0	%	Set
Tank Height (mm)			
Oil Change	0	(H)	Set / Reset
Oil Filter Change	0	(H)	Set / Reset
Air Filter Change	0	(H)	Set / Reset
Starting Battery Svc	0	(H)	Set / Reset
Fuel Filter Change	0	(H)	Set / Reset
Speed Control			
Throttle Start	0.00		Set
Throttle Stop	0.00		Set
Throttle Rate	0.00		Set
Glowplug Temperature Compensation Enable	<input type="checkbox"/>		Set
Fault Settings			
Low Oil Pressure	0.00	BAR	Set
High Temp	0	C	Set
Auto Mode On Fault	<input type="checkbox"/>		Set

Refresh

Packets Sent: 0, Bytes Sent: 0, Packet errors: 0, Day Of Week: 0, Clear Packet Counts, Disconnect, Connect

Packets Received: 0, Bytes Received: 0, Packet Loss: 0.00 %, Firmware: 0.0.0.0

COM5, Disconnected, Engine State, Engine Off, RPM: 0, Last KWh: 0, Engine Run Hours: 0, 00/00/00 00:00:00

Starter Cut Off RPM - This value sets the starter cutoff RPM. The starter will disengage above this value.

Idle RPM - On generators with speed control, this value sets the RPM during warm-up, cool-down, and idle states of the controller.

Max RPM - The highest RPM the engine should be allowed to run. Automatic shutdown will occur if the engine exceeds this value. An RPM above this value will set an over-speed condition alarm.

Vent Fan Delay - Time Fans run after engine shutdown.

Crank Time - The maximum amount of time in seconds to crank the engine on each start attempt. Engine cranking will stop when the RPM reaches the Starter Cut-off RPM value.

Crank Rest Time - The amount of time in seconds the controller will rest between crank attempts.

Crank Attempts - The number of times the engine will try to start.

Low Oil Ignore - The amount of time in seconds to “ignore” the oil pressure switch during start-up of the engine.

Glow plug Post Start - The amount of time in seconds to have the glow plugs engaged after engine start. Max 29 seconds.

Glow plug Temperature Compensation Enable - If enabled it the Glow plugs will automatically enable at a certain temperature and be disabled at another. If this option is not enabled, the time specified by Glow plug Post Start will be used.

Auto Vent Temp - The temperature at which the fans will automatically start will run for the amount of time specified by the Vent Fan setting.

Oil Change - The amount of runtime hours between oil changes.

Oil Change Reset - Reset the countdown timer to the Oil Change value.

Oil Filter Change - The amount of runtime hours between Oil Filter Changes.

Oil Filter Change Reset - Reset the countdown timer to the Oil Filter Change value.

Air Filter Change - The amount of runtime hours between Air Filter changes.

Air Filter Change Reset - Reset the countdown timer to the Air Filter Change value.

Starting Battery Service - The amount of runtime hours between starting battery service routines.

Starting Battery Service Reset - Reset the countdown timer to the Starting Battery Service value.

Fuel Filter Change - The amount of runtime hours between Fuel Filter changes.

Fuel Filter Change Reset - Reset the countdown timer to the Fuel Filter Change value.

Speed Control Group

Throttle Start - Percentage to have the throttle open at startup time. Used only in variable speed models. Typically a factory setting.

Throttle Stop - Maximum throttle position in percent. Used only in variable speed models. Typically a factory setting.

Throttle Rate - During start-up, this is the rate the throttle position will advance each step between the start and stop values. Used only in variable speed models. This is typically a factory setting.

Fuel Tank Calibration

NOTE: Will Be Replaced with a weight sensor in upcoming models.

- Calibrate the empty reading by first emptying the fuel tank, selecting empty, and inputting zero for the Fuel Alarm Level. Hit Set.
- Calibrate the Full reading by first filling the fuel tank, selecting Full, and inputting 100 for the Fuel Alarm Level. Hit Set.

Fault Settings group

Low Oil Pressure - This value sets the low oil pressure limit for the engine. A value below this setting will cause the engine to shut down and set the Low Oil alarm flag. This value is in PSI or BAR depending on the

English/Metric setting. This value is ignored during start up for the period determined by the Low Oil Ignore setting on the Engine Settings page.

High Temp - This value sets the high temperature limit for the engine. A value above this setting will cause the engine to shut down and will set the engine over temperature alarm. The temperature value is in Fahrenheit or Celsius depending on the English/Metric setting.

Auto Mode on Fault - When checked, the controller will stay in the Automatic mode of operation. If unchecked, the controller will revert to the Manual mode of operation.

Battery settings page

The screenshot shows the 'Polar Power Generator Controller - Operator Access' window. The 'Battery' tab is selected, showing the following settings:

- Min Compensated Voltage: 12.00 (Set)
- Max Compensated Voltage: 14.00 (Set)
- Volts Per Degree: C 0.00 (Set)
- Reference Temp: C 78 (Set)
- Battery Temperature: C (empty)
- Battery Current Limit: 100 (Set)
- Battery Over Temp Restart: 0.00 (Set)
- Battery Over Temp Stop: 0.00 (Set)
- Compensated Voltage: (empty)

At the bottom right, there is a 'Refresh' button. Below the settings area, a status bar displays the following information:

- Packets Sent: 0
- Bytes Sent: 0
- Packet errors: 0
- Day Of Week: 0
- Packets Received: 0
- Bytes Received: 0
- Packet Loss: 0.00 %
- Firmware: 0.0.0.0
- Clear Packet Counts button
- Disconnect button
- Connect button

The bottom status bar also shows: COM5, Disconnected, Engine State, Engine Off, RPM: 0, Last KWh: 0, Engine Run Hours: 0, and 00/00/00 00:00:00.

Min Compensated Voltage - This value limits the minimum compensated voltage the generator will produce.

Max Compensated Voltage - This value limits the maximum compensated voltage the generator will produce.

Volts Per Degree - This value sets the temperature compensation for the voltage regulator. The units (Fahrenheit or Celsius) are determined by the English/Metric setting on the Alternator Settings Page. If the Volts Per Degree value is set to 0.00, then the compensation factor will be zero.

Reference Temperature - This value is the reference temperature all calculations are based on. The units (Fahrenheit or Celsius) are determined by the English/Metric setting on the Alternator Settings Page.

Battery Temperature - Actual temperature as measured at the battery. The units (Fahrenheit or Celsius) are determined by the English/Metric setting on the Alternator Settings Page.

Battery Current Limit - Sets a maximum amperage output to battery, if over the limit the engine will slow

Compensated Voltage - This is the voltage the generator will produce, modified by the above settings. The voltage limit is bounded by the Min Compensated Voltage and Max Compensated Voltage settings above.

Battery Over Temp Restart - The temperature of the battery must fall below this value before the generator will be allowed to restart.

Battery Over Temp Stop - If the temperature of the battery reaches or exceeds this value, the generator will stop until the temperature falls below the Battery Over Temp Restart.

A/D readings page

The screenshot shows the 'Polar Power Generator Controller - Operator Access' software window. The 'A/D Readings' tab is selected, displaying a grid of 16 analog-to-digital (A/D) input readings, each with a text label and a corresponding input field. The readings are arranged in two columns. The bottom of the window features a status bar with various system metrics and control buttons.

Polar Power Generator Controller - Operator Access															
File Edit Access Tools Help															
Status Alternator Settings Engine Settings Battery A/D Readings Factory Logs Communications															
A/D 0 - Battery Voltage								A/D 9 - Output Current							
A/D 1 - Alternator Temp								A/D 10 - Internal Alternator Voltage							
A/D 2 - Internal Temp								A/D 11 - Field Current 1							
A/D 4 - Load Current								A/D 12 - Fuel Sensor							
A/D 5 - Oil Pressure								A/D 13 - Alternator Output Voltage							
A/D 6 - Battery Temp								A/D 14 - Diode Bridge Temp							
A/D 7 - Engine Temp								A/D 15 - Field Coil Voltage							
A/D 8 - Field Current 2								A/D 3 - External Volt Ref - will read 0				N/A			

Packets Sent	0	Bytes Sent	0	Packet errors	0	Day Of Week:	0	Clear Packet Counts	
Packets Received	0	Bytes Received	0	Packet Loss	0.00 %	Firmware:	0.0.0.0	Disconnect	Connect

COM5	Disconnected	Engine State	Engine Off	RPM: 0	Last KWh: 0	Engine Run Hours: 0	00/00/00 00:00:00
------	--------------	--------------	------------	--------	-------------	---------------------	-------------------

A/D 0 - Battery Voltage: Volts going into battery read at output terminals of Generator

A/D 1 - Alternator Temp: Temperature reading at the Alternator.

A/D 2 - Internal Temp: Temperature reading in the 250 Controller

A/D 4 - Load Current: Amperage reading at terminals going out to the load.

A/D 5 - Oil Pressure: Measurement of the oil pressure.

A/D 6 - Battery Temp: Temperature reading on the load battery, if option was purchased.

A/D 7 - Engine Temp: Temperature reading of the engine.

A/D 8 - Field Current 2: Current output to engine speed controller on 8000 series, and field oscillator on 6200.

A/D 9 - Output Current: Current going into battery read at output terminals of Generator

A/D 10 - Internal Alternator Voltage: Voltage going to the controller, read on the circuit board.

A/D 11 - Field Current 1: Current output to engine speed controller on 8000 series, and field oscillator on 6200.

A/D 12 - Fuel Sensor: Reading of the amount of fuel left in the tank.

A/D 13 - Alternator Output Voltage: Voltage output from the alternator.

A/D 14 - Diode Bridge Temp: Temperature reading from the Diode Bridge.

A/D 15 - Field Coil Voltage: Voltage from the Field Coil.

A/D 3 - External Volt Ref: - Internal voltage reference. Should read 0, all values are given compared to this number.

Factory page

Polar Power Generator Controller - Operator Access

File Edit Access Tools Help

Status Alternator Settings Engine Settings Battery A/D Readings **Factory** Logs Communications

Calibration

	Offset	Multiplier	Actual	From Controller
Alternator Temperature	0	0.0000	C 110.00	0.00
Alternator Voltage	0	0.0000	0.00	0.00
Alternator Current	0	0.0000	0.00	0.00
Field Current 1	0	0.0000	0.00	0.00
Field Current 2	0	0.0000	0.00	0.00
Field Voltage	0	0.0000	0.00	0.00
Diode Bridge Temp	0	0.0000	C 110.00	0.00
Internal Alt Voltage	0	0.0000	0.00	0.00
Engine Temperature	0	0.0000	C 110.00	0.00
Oil Pressure	0	0.0000	BAR 0.00	0.00
Fuel Sensor	0	0.0000	0.00	0.00
Load Current	0	0.0000	0.00	0.00
Load Voltage	0	0.0000	0.00	0.00
Load Temperature	0	0.0000	C 110.00	0.00
Internal Temperature	0	0.0000	C 24.80	0.00

PID / PWM

PWM Value

P State

I State

D State

Error V

Error C

PID Freq 0 Apply

Pgain 0.000 Apply

Igain 0.000 Apply

Dgain 0.000 Apply

Atten 1 Apply

V deadb 0.00 Apply

C deadb 0.00 Apply

☐ Low RPM Override Set

Refresh

Packets Sent 0 Bytes Sent 0 Packet errors 0 Day Of Week: 0

Packets Received 0 Bytes Received 0 Packet Loss 0.00 % Firmware: 0.0.0.0

Clear Packet Counts

Disconnect Connect

COM5 Disconnected Engine State Engine Off **RPM: 0** Last KWh: 0 Engine Run Hours: 0 00/00/00 00:00:00

Calibration Group Box

Enter the true values that the controller should read under Actual, press calculate to find the multiplier needed to correct the value from the controller, then press store next to the multiplier to apply it.

PID / PWM Group Box

Used to adjust responses to load Changes.

Low RPM Override - Sets RPM to idle speed if it falls below idle. **No longer used.**

PID description and adjustments for Polar Power Generators

PID is a general term used to describe a method of feedback and control on a closed loop servo system.

P = Proportional. P depends on the present error and is equivalent to a gain setting.

I= Integral. I depends on the accumulation of past errors .

D= Derivative. D is a prediction of future errors based on current rate of change.

Also in the Polar generator, an attenuation value is used to compensate for the various levels of current limiting performed by the controller.

All have an effect on accuracy and stability.

Typically, only two values need be adjusted to stabilize the generator output,

Proportional and Attenuation

- If the P value is too low, then the accuracy of the output voltage will be affected and the generator will be slow to respond to changes in the load. If P is too high, then instability or oscillation can occur in the output when there is an abrupt change in the output.
- To “tune” the P value, select a moderate load that will not cause the generator to go into current limit. If, after adjustment, the output is stable, make a change in the output load and observe how quickly the output responds to the change.
- Typical “P” values are between .25 and 1 for a permanent magnet generator with .5 being the most common.
- To adjust the Attenuation value, select a load that will cause the generator to go into current limit. If the output is unstable, increase the attenuation value. The values are between 1 and 10 with 10 having the most attenuation, or dampening effect. If after adjusting the attenuation to 10 and there is still instability, decrease the P value until it stabilizes. Recheck the voltage stability after (no current limit) tuning the current limit mode stability.

Logs page

The screenshot shows the 'Polar Power Generator Controller - Operator Access' window. The 'Logs' tab is selected in the top menu. The 'Number of logs' is 0, and 'Selected Log' is 1. A 'Log Entry' table is displayed with various parameters and their values. Below the table is a 'Get Number of Starts' button and a 'Controller Starts:' label. The bottom status bar shows communication statistics (Packets Sent, Bytes Sent, Packet errors, Day Of Week, Packets Received, Bytes Received, Packet Loss, Firmware) and engine status (COM5, Disconnected, Engine State, Engine Off, RPM: 0, Last KWh: 0, Engine Run Hours: 0, 00/00/00 00:00:00).

Log Entry	
Stop Type	Normal
Stop Caller	Auto
Start Time	00:00:00
Start Date	00/00/00
Stop Time	00:00:00
Stop Date	00/00/00
Start Voltage	0.00
Peak Voltage	0.00
Stop Voltage	0.00
Stop Current	0.0
Peak Current	0.0
Peak RPM	0000
Peak Load	0.0
KW Hours this run	0
Total KWh	0
Fuel Start %	0
Fuel Stop %	0

Get Number of Starts Controller Starts:

Packets Sent: 0 Bytes Sent: 0 Packet errors: 0 Day Of Week: 0 Clear Packet Counts
Packets Received: 0 Bytes Received: 0 Packet Loss: 0.00 % Firmware: 0.0.0.0 Disconnect Connect

COM5 Disconnected Engine State Engine Off RPM: 0 Last KWh: 0 Engine Run Hours: 0 00/00/00 00:00:00

This page contains the last run logs of the generator set. They can be viewed by scrolling through or inputting a specific log value into the Selected Log text field.

Get Number of Starts - returns total number of times Generator has been started.

Communications page

Polar Power Generator Controller - Operator Access

File Edit Access Tools Help

Status Alternator Settings Engine Settings Battery A/D Readings Factory Logs Communications

Connection Type

☐ Direct Connect

☐ Analog Modem

☒ Ethernet URL 192.168.2.4

Port 10001

Version Checking

☐ Automatic - Slower initial connect!

☐ Version 1.0.6.x and below

☒ Version 2.x and above

SMS Messaging

☐ SMS Enabled Set

SMS Format Cmd AT+CMGF=1 Set

SMS Provider Number Set

SMS Recipient Set

SMS Message Format \$D, \$T, Location, \$A Set

SMS Format variables
 \$D = Date \$T = Time \$A = Alarm type
 (Future variables. Not implemented at this time)
 \$v = Voltage at alarm \$a = Amperage at alarm \$r = RPM at alarm
 \$f = Fuel Level \$k = Relay status

Refresh

Controller Modem Settings

Dial Command ATDT Set

Home Office Phone Set

Controller Modem Init String AT&F Set

Switch Custom Text

SW 1 Unsigned SW 2 Unsigned

Save

Packets Sent 0 Bytes Sent 0 Packet errors 0 Day Of Week: 0 Clear Packet Counts

Packets Received 0 Bytes Received 0 Packet Loss 0.00 % Firmware: 0.0.0.0 Disconnect Connect

COM5 Disconnected Engine State Engine Off RPM: 0 Last KWh: 0 Engine Run Hours: 0 00/00/00 00:00:00

Connection Type Group Box

Direct Connect - The controller program will be connected to the generator by a wired connection.

Analog Modem - The connection information for the analog Modem.

Ethernet URL - The IP information of Ethernet connection.

Port - the port used with the Ethernet connection.

SMS Messaging Group Box

This option will be difficult for those to set up who are not located within the United States.

SMS Enabled - Check to enable SMS messaging.

SMS Format Cmd - Sets up how SMS messages will be transmitted.

SMS Provider Number - Number of service provider who will relay SMS.

SMS Recipient - Number of the device which will receive SMS.

SMS Message Format - Set up the information received in the SMS message. Include a format variable separated by a comma.

Version Checking Group Box

Automatic - Checks the version number of the program and for updates. Slower than other two options.

Version 1.0.6x and below - No longer in use.

Version 2.x and above - Checks for updates to version 2 software.

Controller Modem Settings Group Box

Dial Command -

Home Office Phone - Set the number of the home office phone to use.

Controller Modem Init String -


Switch Custom Text Group Box

SW 1 - Text entered here will appear in the SW1 Switch on the Status Page

SW2 - Text entered here will appear in the SW2 Switch on the Status Page

Save - Saves the settings entered on this page.

Passwords

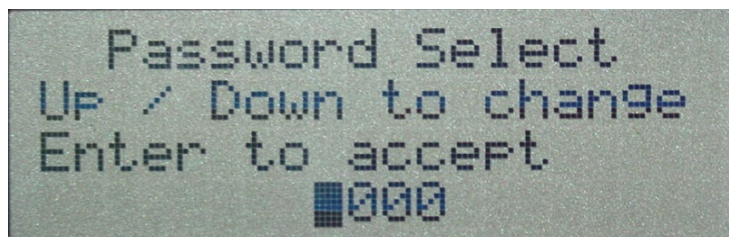

Passwords may only be retrieved by contacting:

POLAR POWER INC.

Tel: (310) 830-9153, Fax: (310) 830-9825

You will be required to verify your ownership of the equipment before this password is given!

This password is NOT changeable!

Below is a section where you may write down passwords you have set inside the control panel, and the password from Polar Power to access the Password Select.

Maintenance Password: __ __ __ __ **Default: 0000**

Engineering Password: __ __ __ __ **Default: 8282**

Password Select: __ __ __ __ Call for password

TABLE OF INPUT / OUTPUT PARAMETERS

Charging Control	Description
Alternator Voltage	Sets the voltage output of the alternator
Alternator Current	Sets the maximum current output
Battery High Voltage Stop	Sets the voltage that the battery must reach to start the shutdown sequence, the next stage in shut down is the Low Current Stop
Battery Low Current Stop	Sets the value that the output current must be equal to or below to continue the shutdown sequence
Engine Stop Delay (0 – 32,767)	Sets the seconds that the generator can continue to run after the High Voltage Stop and the Battery Low Current Stop conditions have been satisfied. This countdown timer completes the charge cycle.
Bat Low Voltage Start	The voltage that the battery must be at or below, before starting the timers for a start sequence
Engine Start Delay (0 – 32,767)	Sets the seconds that the battery voltage must be at or below the Low Voltage Start, before initiating the start sequence.

Battery Monitor, Optional	Description
Temperature Compensation	Enabling this option will adjust the Max Voltage output from the alternator, according to the battery temperature.
Volts per Degree	This value is the voltage shift per degree of the battery temperature.
Reference Temperature	This is the baseline temperature value; battery temperature rising above this value will cause the voltage to decrease by the volts per degree value. Temperatures below this value will cause the voltage to increase.
Min Temp Compensation Volts	This is the lowest voltage that the temperature compensated adjustment will be limited to.
Max Temp Compensation Volts	This is the highest voltage that the temperature compensated adjustment will be limited to.
Battery Over Temperature Charge Termination	This is the maximum temperature the batteries can reach, before terminating the charge cycle. This will trigger a “Battery Over Temperature Fault” Alarm.
Max Charging Current	This is the maximum current charge into the battery. It is calculated from the difference between the output of alternator and the load current.

Generator Start/Stop/Run	Description
Engine Warm-up Time (0 – 255)	Seconds to hold the engine at idle (speed controlled engines) or keep the field coil un-energized (fixed RPM engines) after the engine has started.
Engine Cool Down Time (0 – 255)	Seconds to hold the engine at idle (speed controlled engines) or keep the field coil un-energized (fixed RPM engines) before the engine stops.
Starter Motor Disengage RPM / Min RPM	The RPM value that defines that engine has started and disengages the starter. If the engine is in a run sequence and the RPM drops below this level, it will trigger a “Low RPM fault” alarm.
Low Speed charging suspension	If the engine speed drops below this value, the charging is suspended until the speed recovers and 15 seconds pass. For 6200 Series Alternators only, not necessary for 8000 Series.
Max RPM	The maximum RPM before triggering the “Over RPM fault”. The fuel supply and / or the ignition is then shut off and “Overspeed” alarm is generated.
Idle RPM	Sets the RPM during the warm up period. This is only available for 8000 Series Alternators. For multispeed 6200 Alternators this function is within a secondary controller.
Crank Time	Seconds to keep the starter engaged. If RPM is at or above the Cutoff RPM, it overrides this value and disengages the starter.
Crank Rest Time	Sets the seconds between failed starts due to Crank Time expiring. The glow plug is OFF at this time.
Crank Attempts	Sets the number of attempts to start the engine, before aborting and triggering a “Failed Start fault” Alarm.
Lube Oil Pressure Ignore	Seconds to ignore the oil pressure switch or oil pressure sensor. If after this time expires and the switch or sensor still shows low oil, the engine will shut-down, and trigger a “Low Oil fault” alarm.
Glow Plug Pre-Heat	Sets the Glow Plug Pre-Heat duration in seconds. This feature is used only if the “Glow Plug Temperature Compensation” option is not selected. If the Temperature Compensation is selected, this is the value to keep the glow plug engaged after the engine has started to accelerate warm up.
Temperature regulated Glow Plug Pre-heat (1 - 29 seconds)	The pre-heat for the glow plugs is determined by the engine coolant temperature. At -20 C and lower pre-heat is 29 sec and 40 C and higher the Pre-heat is 1 second.
Auto Vent Fan Temperature	This sets the temperature that the vent or radiator fan(s) will start to cool the generator and / or the enclosure. Once the temperature drops below that value, the vent fan will disengage. The vent fan may come on at any time.
Auto Vent Fan Delay	Sets the seconds on the vent fan run before starting the generator and how long to keep the vent fan running after the generator has started. If the engine coolant temperature is above the “Auto Vent Fan Temperature” setting, the count-down timer at the end of the run cycle will not count down until after the engine has cooled off below the set point.

Fuel Level Monitor, Optional	Description
Fuel Level Alarm Set Value	The percent at which the fuel tank will trigger a low fuel alarm. Defaults to 25%. Low fuel can either provide maintenance alarm or shutdown engine.
Fuel Tank Calibration	Sets the “empty” and “full” calibration points of the fuel container. The controller and fuel transducer will interpolate the percentages of fuel between the two calibrated points.

Engine Analog Inputs, Model 250	Description
Low Oil Pressure, Transducer	Sets the minimum operating oil pressure. If the oil pressure drops below this value, it will trigger a “Low Oil fault” and an alarm event will shutdown the engine.
High Engine Temperature, Sensor	Sets the maximum coolant temperature. If temperature rises above this value it will trigger an “Over Temp fault” and an alarm event will halt the engine.

Engine Switch Inputs, Model 290	Description
Coolant Level	SW6. Through an optional level switch in the radiator, this feature can provide a maintenance warning on low coolant level. Alarm event will provide maintenance warning.
Hi Temperature, Switch	SW7. Monitors either: engine coolant, oil, or enclosure. Alarm event will shut down engine.
Air Filter Restriction, Switch	SW8. Using a vacuum switch we can sense air restriction in the engine air intake filter. An alarm event will provide a maintenance warning.
Low Oil pressure, Switch	SW6. Low oil level using pressure switch in place of the oil pressure transducer. An alarm event will shut down engine.

Engine Switch Inputs, Model 290	Description
Fuel Tank Leak	With a leak detector switch, this can be hooked up to either SW1 or SW2 to trigger a maintenance warning when it detects a leak.
Shut Down Engine	SW3 is used for the presence of alternate power input for charging the batteries. If the unit has started with this switch open and then it closes from an external power detection, it will shut the engine down normally. If the unit has started with this switch closed, the unit will continue to do a full run cycle. Examples of alternate power are: AC line, or Solar / Wind availability
Intrusion Alarm	SW1 and SW2 are customer customizable in the GUI.
Emergency Stop	SW4
Remote Stop	SW5

Weekly/ Monthly Exercise	Description
Exercise Rate	This setting has 3 selections: None, Weekly, Bi-Weekly, Monthly.
Exercise Day	This setting has different values depending on the Exercise Rate setting. Weekly will give the days of the week, and Monthly will give the days of the month.
Exercise Duration	This is the time in minutes to run the system on the scheduled Rate, Day, and Time.
Exercise Time	These two values set the hour and minute for the system to start the Exercise on the day selected by the Rate and Day settings.

Service Settings	Description
Oil Change	Time in Engine Run-time Hours between oil changes.
Oil Filter Change	Time in Engine Run-time Hours between oil filter changes.
Air Filter Change	Time in Engine Run-time Hours between air filter changes.
Start battery Service	Time in Engine Run-time Hours between services of the Starting Battery.
Fuel Filter Change	Time in Engine Run-time Hours between fuel filter changes.

Data Available on the Display	Description
Starting Battery Voltage	This is the actual voltage of the starting battery in the system.
Controller Version and Compile Flags	This shows the current firmware version of the controller, GUI, and what compile flags were used.
Date and Time	Date and Time inside the controller.
Engine Run-Time Hours	Accumulated hours, minutes, and seconds that the engine has run.
RPM	Actual RPM of the engine.
KWh Current / Last Run	This shows how many KWh were produced during the last run, or if it is running, the current KWh for this run. This value goes to 0 upon startup sequence.
KWh Accumulated	This shows the total accumulated KWh that the system has produced.
Fuel level	This shows the fuel level, in percent, that is left in the fuel container.
Oil Pressure	Actual oil pressure being read by the Oil Pressure Sensor, if equipped.
Engine Temperature	Actual temperature of the engine, read by the Engine Temperature Sensor, if equipped.
Diode Bridge Temperature	Actual temperature of the Diode Bridge.
Alternator Temperature	Actual temperature of the Alternator.
Controller Temperature	Actual temperature inside the controller.

Power Reduction Settings	Description
Engine Temperature	The temperature at which the system will cut the power output in half, to try to lower the engine temperature (in future updates, it will set a warning). Once it is below this value, it will resume full power. If the temperature continues to rise to the second set point, the system will shutdown with an over temperature alarm.
Supra Controller Over Temp	The temperature at which the system will cut the power output in half, to try to lower the internal temperature of the controller (in future updates, it will set a warning). Once it is below this value, it will resume full power.


Power Reduction Settings	Description
Diode Bridge Temperature	The temperature at which the system will cut the power output in half, to try to lower the diode bridge temperature (in future updates, it will set a warning). Once it is below this value, it will resume full power.
Battery Temperature	The temperature that the system will cut the power output in half, to try to lower the battery temperature (in future updates, it will set a warning). Once it is below this value, it will resume full power.
Alternator Temperature	The temperature that the system will cut the power output in half, to try to lower the alternator temperature (in future updates, it will set a warning). Once it is below this value, it will resume full power.

Alarm Contacts, Dry Contact Closure	Either the speed control or Generator Status is available
Generator Fail	K8 is the fault relay that is tripped when any of the above fault conditions occur. To clear this fault, you must toggle between Automatic and Manual mode. On some models that use multi-speed engine control, this fault relay is not used for faults.
Generator Warning	K7 is the warning relay that is tripped when any of the above warning conditions occur. This relay will disengage when the warning has cleared, either on its own or by user intervention.
Speed control for 6200 Series Only	On some models, K7 and K8 are used to change the RPM of the engine to a pre-determined set speed, via digital output. The values can be: off - off off - on on - off on - on

CONTROLLER PANEL OPERATION



Main screen

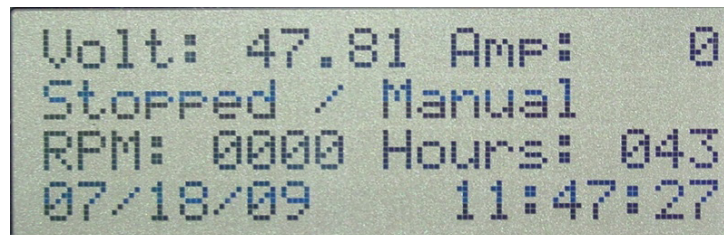

The main screen of the control panel shows the basic information about the system at a glance.

Descriptions of each line:

1. The voltage that is being read from the battery bank and the total amperage going into the battery bank.
2. Shows if the generator is running or stopped and if it is in manual mode or automatic mode.
3. Shows the RPM of the engine at that moment and how many hours that the engine has run.
4. Cycles through various lines of information, which can be set through the Maintenance Menu. See the Maintenance Menu section for help on setting which information you would like to see on the fourth line.

This is the screen that should be displayed during normal run-time operations. There is no time-out inside the menu that will bring it back to this screen. The menus must be exited to display this screen.

Keypad operation

The keypad on the Supra Generator Control Panel consists of 5 buttons. Stop, Down, Enter, Up, and Back Light.

Buttons

Stop - This button will stop the engine at ANY time and bring you back to the main menu.


Down - This button is used to move the cursor down in the menu selections, decrease values in selected menu items, or to scroll the logs down while in the log output screen.

Enter - This button will select the menu item that the cursor is on, set the values in the individual menu selections that are changed with the up / down buttons, and is used to exit the current log being viewed. Pressing this button while on the main screen will get you into the menus.

Up - This button is used to move the cursor up in the menu selections, increase values in selected menu items, or to scroll the logs up while in the log output screen.

Back Light - This button will cycle through 4 different settings of the back light, from off to bright.

Menu select

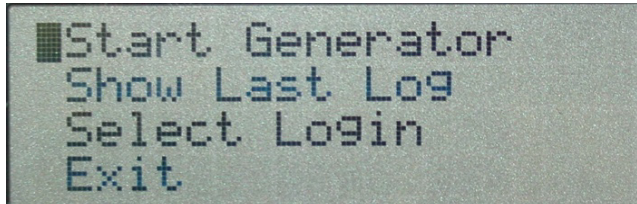

This screen consists of 4 lines.

Start Generator, Show Last Log, Select Login, Exit


Start Generator - This will bring you to the menu to change automatic / manual mode, start the generator, or exit back to the main menu. See "Starting The Generator" section for more.

Show Last Log - This will bring you to a screen where you can select the log number to view. See "Showing The Logs" section for more.

Select Login - This will bring you to a screen that allows you to select which access level may enter the menu system. See "Select Login Level" for more.

Exit - This will bring you back to the main screen.

Starting the generator

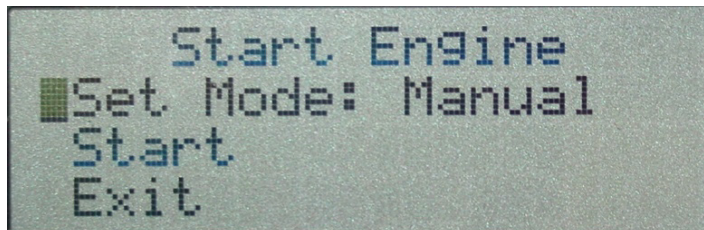

This screen has three selections you may choose from.

Set Mode, Start, Exit

Set Mode - This will toggle between automatic mode and manual mode of the generator. The value displayed is the current mode. I.E. If it shows "Manual", then the generator is in manual mode. If it shows "Automatic", then the generator is in automatic mode. Upon a fault from the generator (Over Temperature, Low Oil, Low RPM, Over RPM) this value needs to be toggled to clear the fault.

Start - If the mode is set to manual, this will start the engine. After pressing this button, whether in automatic or manual mode, it will return to the main screen.

Exit - This will exit you back to the main screen.

Showing the logs

```
Total Logs: 10
Selected Log Number
           10
Select Log 0 to exit
```

The top line will show how many logs have been recorded into the Controller. Use the Up and Down arrows to increment or decrement the log entry you wish to view. Select log number zero to exit back to the main screen. Press Enter to view the selected log number.

When viewing an individual log entry, use the Up and Down arrows to scroll up or down to view the log data. Press the Enter button to exit back to the main screen. Log data entries consist of the following:

Start - Date and Time when the engine started.

Stop - Date and Time when the engine stopped.

Peak Voltage - The highest voltage that the generator produced.

Peak Current - The highest current output that the generator produced.

Peak Load - The highest current output that the load used.

Peak RPM - The highest RPM recorded during the run cycle.

Start Volts - The voltage of the battery bank when the cycle started.

Stop Volts - The voltage of the battery bank when the cycle stopped.

Stop Current - The current at the time the cycle stopped.

Last KWH - KWH produced during this cycle.

Total KWH - Accumulative KWH of the generator.

Start Fuel - Fuel level percentage at the start of the cycle.

Stop Fuel - Fuel level percentage at the end of the cycle. Stop Condition: What caused the engine to stop. Most entries will contain "Automatic / Normal" stop condition.

The following screen contains a sample log entry.

```
Start:07/15/09 11:29
Stop: 07/16/09 15:19
Peak Volt: 46.52
Log #5 Up/Dwn/Enter
```

```
Peak Volt: 46.52
Peak Cur: 96.16
Peak Load: 52.00
Log #5 Up/Dwn/Enter
```



```
Peak RPM: 2861  
Start Volt: 46.39  
Stop Volt: 46.33  
Log #5 UP/Dwn/Enter
```

```
Stop Volt: 46.33  
Stop Cur: 95.19  
Last KWh: 121  
Log #5 UP/Dwn/Enter
```

```
Last KWh: 121  
Total KWh: 121  
Start Fuel: 99.58  
Log #5 UP/Dwn/Enter
```

```
Start Fuel: 99.58  
Stop Fuel: 99.97  
Stopped CAN Bus  
Log #5 UP/Dwn/Enter
```

Select login level

```
_Maintenance Select  
_Engineering Select  
Password Select  
Exit
```

This menu selection, allows you to select which access level may enter into the menu system. Use the Up and Down arrow keys to select between each level you wish to enter, and then press the Enter key.

Maintenance - This level of security allows for the maintenance person to perform sets / resets of when maintenance was performed. See the Maintenance menu later in this document.


Engineering - This level of security allows for a technician to change some of the settings of the Controller. See the Engineering menu later in this document.

Password - This level of security will allow you to change the passwords of the Maintenance, Engineering, or do a complete reset of the passwords to default. See the Password Select section later in this document.

Each level login has access to the previous level. Maintenance level has access only to that login level. Engineering has access to both Maintenance and Engineering. Password select has access to all levels.

There is a 5 minute timeout for the login. If there are no buttons pressed for 5 minutes, the control panel resets to no current login. The Stop and Back Light buttons do not reset the 5 minute timer for the auto logoff. The display does NOT revert back to the main screen at logoff at this time.

Maintenance password entry

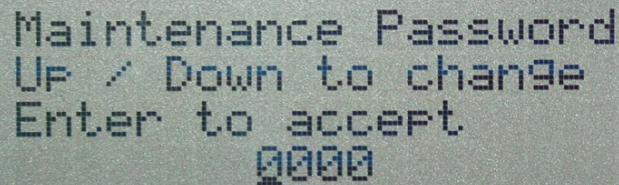

```

Maintenance Password
Up / Down to change
Enter to accept
0000
  
```

This item allows you to enter the password for the Maintenance level of menus. Use the Up and Down arrow buttons to increment or decrement the number under the blinking cursor. Use the Enter button to accept that number and advance to the next number. When pressing Enter on the 4th digit, it will validate the password with the password stored inside the control panel. If the password fails, it will return to the main screen. If the password is accepted, it will advance to the Maintenance menu.

The default password for the Maintenance menu is: 0000



This password may be changed in the "Password Select" section.

Maintenance menu

<ul style="list-style-type: none"> ■ Reset Oil Change Reset Oil Filter Reset Air Filter Next 	<ul style="list-style-type: none"> Reset Start Batt Reset Fuel Filter ■ Next
<ul style="list-style-type: none"> Set Oil Chng Timer Set Oil Fltr Timer Set Air Fltr Timer _Next 	<ul style="list-style-type: none"> Set Strt Bat Srvc ■ Set Fuel Fltr Timer Next
<ul style="list-style-type: none"> Show Fuel Level Show Oil Pressure Show Engine Temp ■ Next 	<ul style="list-style-type: none"> Show KWh Show Oil Filter Show Oil Change ■ Next
<ul style="list-style-type: none"> Show Air Filter Show Fuel Filter Show Start Bat Srvc _Next 	<ul style="list-style-type: none"> Show Start Bat Volt Show Total KW Controller Info ■ Exit

The maintenance menu consists of 8 menu screens, shown above. Use the Up and Down arrows to move the blinking cursor up or down to the preferred entry, and then press the Enter button to enter into that menu selection. The last line is always Next or Exit. When selecting Exit, it will bring you back to the main screen.

Reset menu items

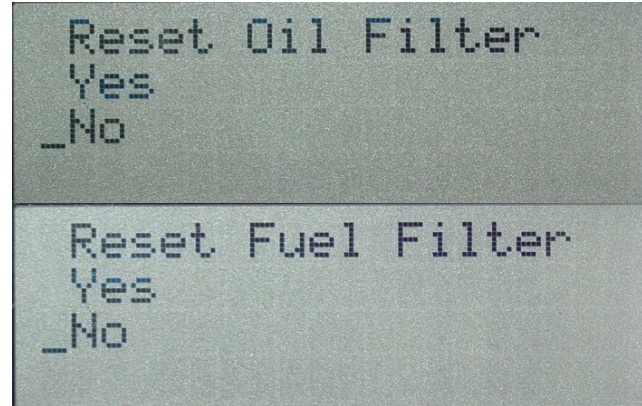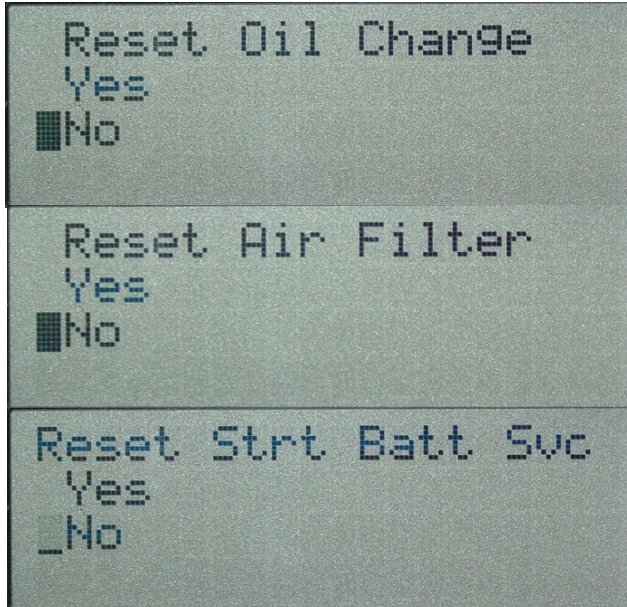

These menu entries will allow you to reset the run-time accumulated for the selected item. When the oil has been changed, the maintenance person will come into this menu and “reset” the Oil Change timer. The following resets are available.

Oil Change - Resets the counter to display the full time left before the next oil change.


Oil Filter Change - Resets the counter to display the full time left before the next Oil Filter change.

Air Filter Change - Resets the counter to display the full time left before the next Air Filter change.

Fuel Filter Change - Resets the counter to display the full time left before the next Fuel Filter change.

Starting Battery Service - Resets the counter to display the full time left before the next service required to the Starting Battery.

Maintenance set menu items

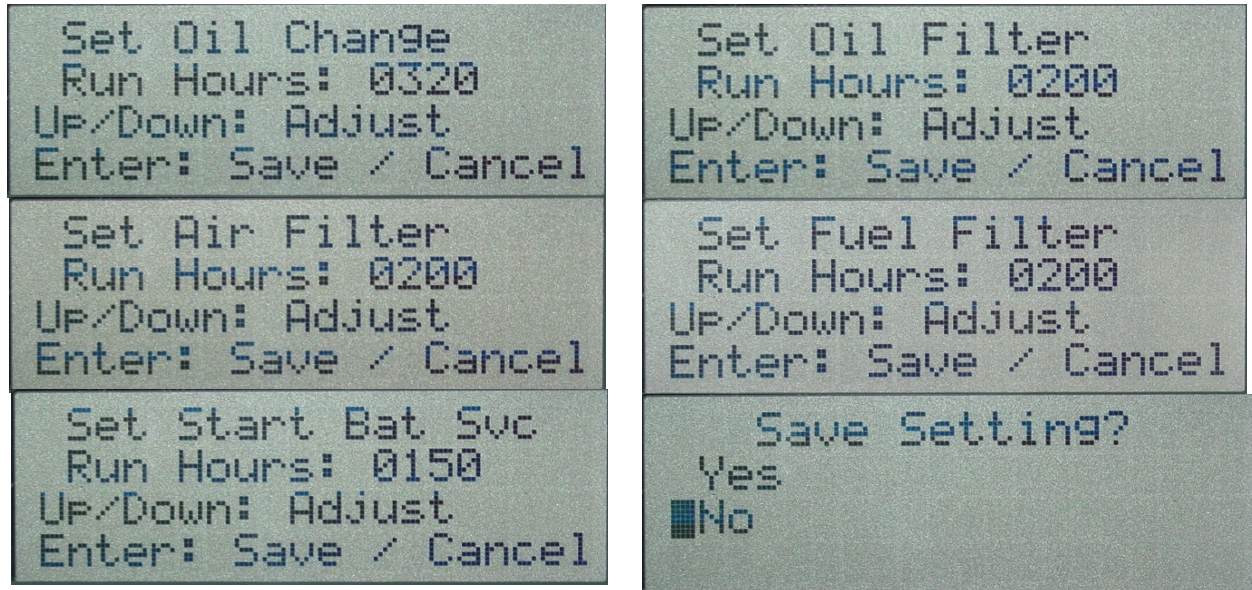

The Maintenance level Set menus allow the maintenance person to change the duration between services. The following items may be changed. Use the Up and Down arrow keys to increment or decrement the values shown on line 2 of the display. Press Enter to store the value. Upon pressing enter, you will be asked if you wish to save the entry.

Oil Change - This item will adjust the reference time between oil changes.


Oil Filter Change - This item will adjust the reference time between oil filter changes.

Air Filter Change - This item will adjust the reference time between air filter changes.

Fuel Filter Change - This item will adjust the reference time between fuel filter changes.

Starting Battery Service - This item will adjust the reference time between starting battery services.

Show status items

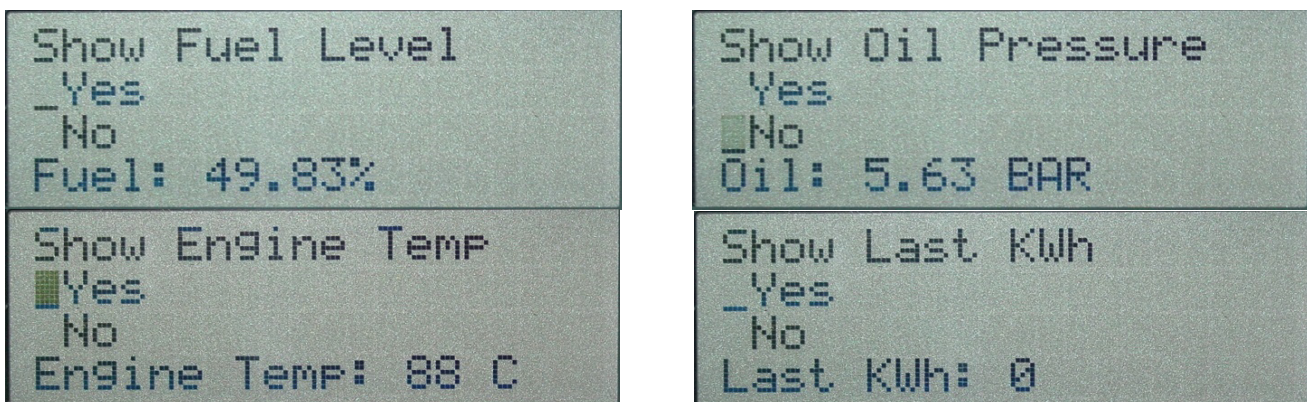


```

Show Oil Filter
  Yes
  No
Oil Filter: 157

Show Air Filter
  Yes
  No
Air Filter: 157

Show Start Bat Srv
  Yes
  No
Start Batt Svc: 107

Show Total KWh
  Yes
  No
Total KWh: 188

```

```

Show Oil Change
  Yes
  No
Oil Change: 57

Show Fuel Filter
  Yes
  No
Fuel Filter: 157

Show Start Bat Volt
  Yes
  No
Start Batt V: 15.64

```

This set of menu items allows you to show or hide entries on the last line of the main screen. Upon entry to each item, the cursor is set to its current setting. When the cursor is blinking next to Yes, then that means that entry will cycle through on the last line of the main window. When the cursor is blinking next to No, then that means that entry will not cycle through on the last line of the main window. While in each entry, the last line will show the current values of that entry. Use the Up and Down arrows to move the cursor up or down. Press Enter to store.

Available selections are:

Fuel level - Shows the percentage of fuel left in the tank.

Oil Pressure - Shows the oil pressure from the pressure sensor on the engine, if the engine is equipped with a pressure sensor. Oil pressure switches do not give a value here.

Engine Temp - Shows the temperature of the engine, if the engine is equipped with a temperature sensor. Temperature switches do not give a value here.

Last KWH - Shows the KWh of the last run of the engine or the currently generated power, if the engine is running and generating power at the time of viewing.

Oil Filter - Shows the time left before the oil filter needs to be changed. Values are set / reset via the set / reset menu entries.

Oil Change - Shows the time left before the oil needs to be changed. Values are set / reset via the set / reset menu entries.

Air Filter - Shows the time left before the air filter needs to be changed. Values are set / reset via the set / reset menu entries.

Fuel Filter - Shows the time left before the fuel filter needs to be changed. Values are set / reset via the set / reset menu entries.

Starting Battery - Shows the time left before the starting battery needs to be serviced. Values are set / reset via the set / reset menu entries.

Starting Battery Voltage - Shows the voltage of the starting battery.

Total KWh - Shows the total accumulated KWh that the generator has produced.

Controller information

```
Firmware: 2.0.0.33
          CFLAGS:
M-M48-48V-E
Press Enter
```

This item shows the Controller's version and compile flags. Pressing Enter will return you to the Maintenance menu.

Engineering password entry

```
Engineering Password
Up / Down to change
Enter to accept
  000
```

This item allows you to enter the password for the Engineering level of menus. Use the Up and Down arrow buttons to increment or decrement the number under the blinking cursor. Use the Enter button to accept that number, and advance to the next number. When pressing Enter on the 4th digit, it will validate the password with the password stored inside the control panel. If the password fails, it will return to the main screen. If the password is accepted, it will advance to the Engineering menu.



The default password for the Engineering menu is: **8282**

This password may be changed in the "Password Select" section.

Engineering menu

```
■Set Max Voltage
Set Max Current
Set Batt Chrg Lmt
Next
```

```
Set Low Volt Start
Set High Volt Stop
Set Low Current Sto
_Next
```

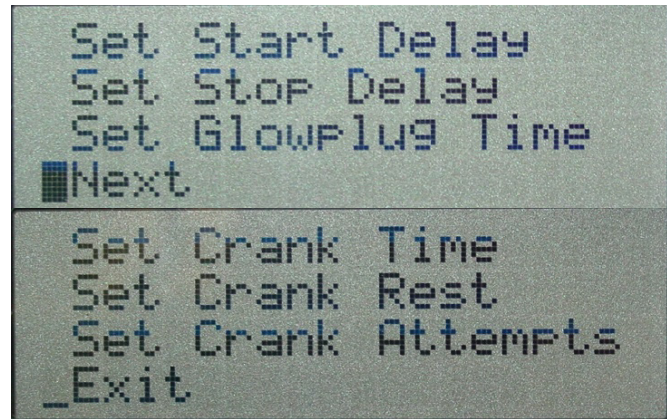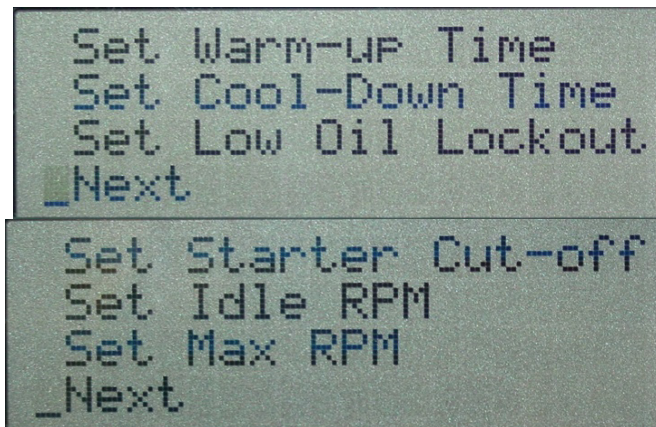
This set of menus allows you to set various items inside the controller. Use the Up and Down arrows to the desired entry, and press the Enter button to select. The last line will be Next or Exit. Selecting Exit will return you to the main screen.



WARNING


Setting some of these settings to values outside their designed range may damage the system!

Storage confirmation

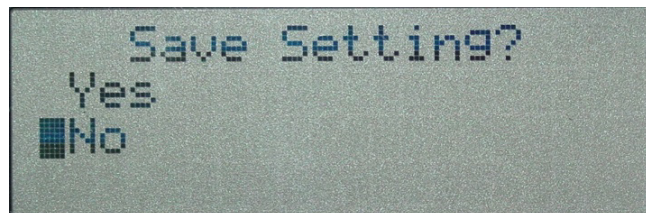

This window is used to confirm the changes you have made to the set points inside the Engineering menu. Use the Up and Down arrows to select Yes or No. Press Enter to select.

Set maximum voltage

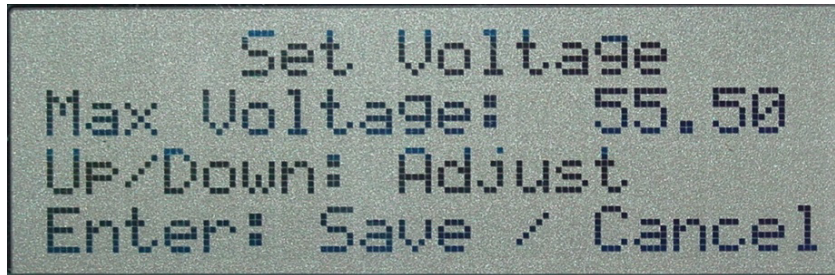


```
Set Voltage
Max Voltage: 55.50
Up/Down: Adjust
Enter: Save / Cancel
```

This option allows you to change the desired max output voltage. Use the Up and Down arrows to increment or decrement the desired voltage. Press the Enter button to advance to the storage confirmation window.

Setting this value too high may damage your equipment or the generator!

Set maximum current

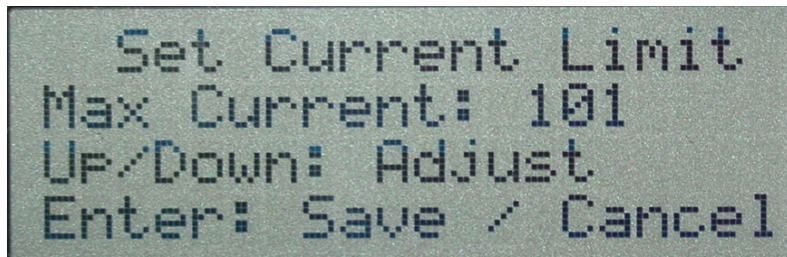


```
Set Current Limit
Max Current: 101
Up/Down: Adjust
Enter: Save / Cancel
```

This option allows you to change the desired max amperage to generate. Use the Up and Down arrows to increment or decrement the desired amperage. Press the Enter button to advance to the storage confirmation window.

Setting this value too high may damage your equipment or the generator!

Set battery charge limit

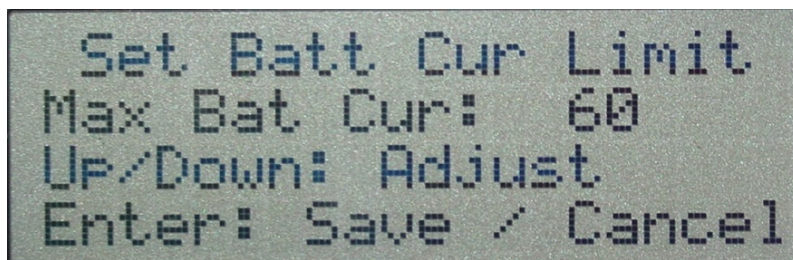


```
Set Batt Cur Limit
Max Bat Cur: 60
Up/Down: Adjust
Enter: Save / Cancel
```

This option allows you to change the desired max amperage to be put into the battery bank. Use the Up and Down arrows to increment or decrement the desired amperage. Press the Enter button to advance to the storage confirmation window.

Setting this value too high may damage your equipment or the generator!


Set low voltage start

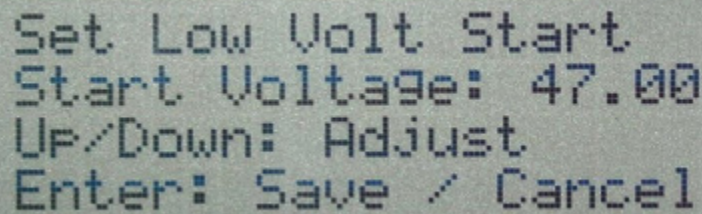

```
Set Low Volt Start
Start Voltage: 47.00
Up/Down: Adjust
Enter: Save / Cancel
```

This option allows you to change the desired voltage required to trigger the start of the automatic charging cycle. Use the Up and Down arrows to increment or decrement the desired voltage. Press the Enter button to advance to the storage confirmation window. This option is described in more detail in the Controller manual. This option only applies to Automatic mode.


Set high voltage stop

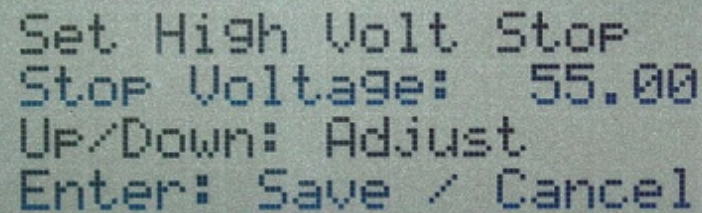

```
Set High Volt Stop
Stop Voltage: 55.00
Up/Down: Adjust
Enter: Save / Cancel
```

This option allows you to change the desired voltage required to trigger the stop of the automatic charging cycle. Use the Up and Down arrows to increment or decrement the desired voltage. Press the Enter button to advance to the storage confirmation window. This option is described in more detail in the controller manual. This option only applies to Automatic mode.

Set low current stop

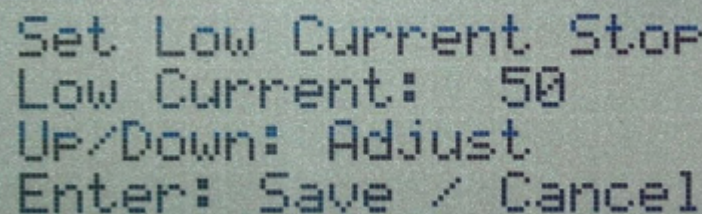


```
Set Low Current Stop
Low Current: 50
Up/Down: Adjust
Enter: Save / Cancel
```

This option allows you to change the desired amperage required to trigger the stop of the automatic charging cycle. Use the Up and Down arrows to increment or decrement the desired amperage. Press the Enter button to advance to the storage confirmation window.

This option is described in more detail in the Controller manual. This option only applies to Automatic mode.


Set warm-up time

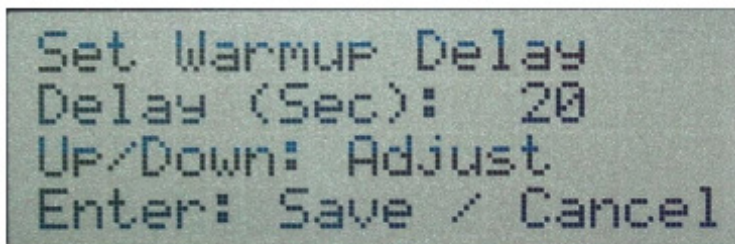

```
Set Warmup Delay
Delay (Sec):  20
Up/Down: Adjust
Enter: Save / Cancel
```

This option allows you to change the desired time to run the engine at idle before generating power. Use the Up and Down arrows to increment or decrement the desired time in seconds. Press the Enter button to advance to the storage confirmation window.


Set cool-down time

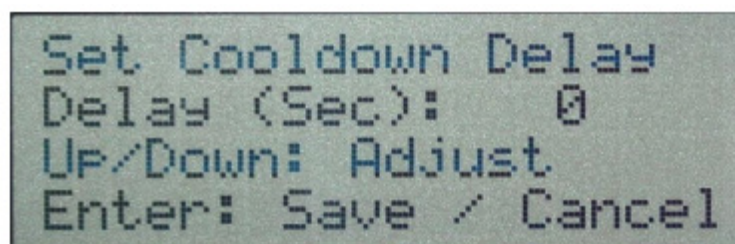

```
Set Cooldown Delay
Delay (Sec):  0
Up/Down: Adjust
Enter: Save / Cancel
```

This option allows you to change the desired time to run the engine at idle before shutting off. Use the Up and Down arrows to increment or decrement the desired time in seconds. Press the Enter button to advance to the storage confirmation window. This option only applies to Automatic mode.


Set low oil lock-out time

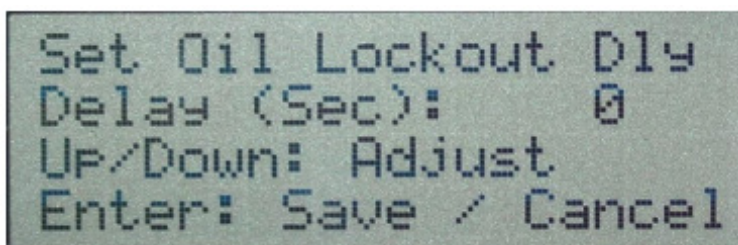

```
Set Oil Lockout Dly
Delay (Sec):  0
Up/Down: Adjust
Enter: Save / Cancel
```

This option allows you to change the desired time to ignore the oil pressure switch and/or oil pressure sensor upon startup of the engine. Use the Up and Down arrows to increment or decrement the desired time in seconds. Press the Enter button to advance to the storage confirmation window.


Set start delay

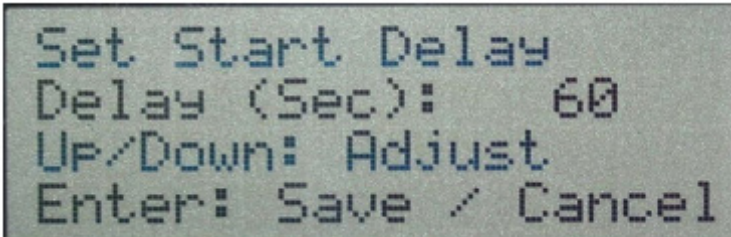

```
Set Start Delay
Delay (Sec):  60
UP/Down: Adjust
Enter: Save / Cancel
```

This option allows you to change the time required for the voltage to be below the Low Voltage Start setting. Use the Up and Down arrows to increment or decrement the desired time in seconds. Press the Enter button to advance to the storage confirmation window. This option only applies to Automatic mode.


Set stop delay

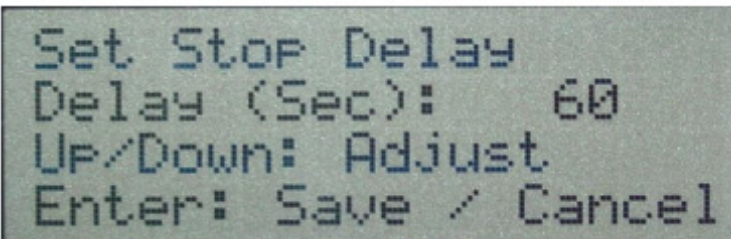

```
Set Stop Delay
Delay (Sec):  60
UP/Down: Adjust
Enter: Save / Cancel
```

This option allows you to change the time required for the voltage to be above the High Volt Stop setting and below the Low Current Stop setting. Use the Up and Down arrows to increment or decrement the desired time in seconds. Press the Enter button to advance to the storage confirmation window. This option only applies to Automatic mode.


Set glow plug time

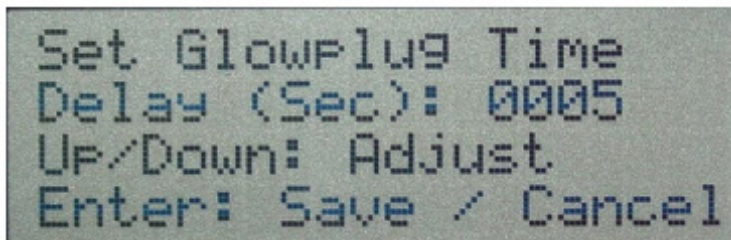

```
Set Glowplug Time
Delay (Sec): 0005
UP/Down: Adjust
Enter: Save / Cancel
```

This option allows you to change the time for the glow plug to be on before attempting to start the engine. Use the Up and Down arrows to increment or decrement the desired time in seconds. Press the Enter button to advance to the storage confirmation window.


Set starter cut-off RPM

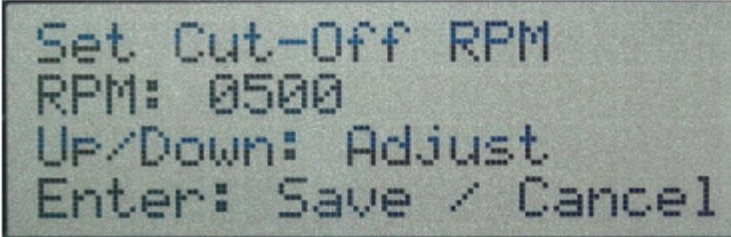

```
Set Cut-Off RPM
RPM: 0500
Up/Down: Adjust
Enter: Save / Cancel
```

This option allows you to set the minimum RPM the engine must turn before disengaging the starter. Use the Up and Down arrows to increment or decrement the desired RPM. Press the Enter button to advance to the storage confirmation window. Setting this value too high may result in damage to the starter or flywheel!


Set idle RPM

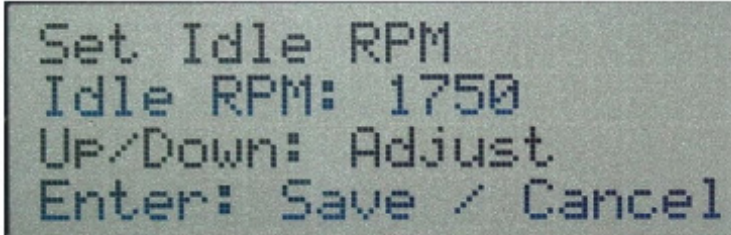

```
Set Idle RPM
Idle RPM: 1750
Up/Down: Adjust
Enter: Save / Cancel
```

This option allows you to set the RPM to keep the engine at an idle during warm-up or cool-down stages. Use the Up and Down arrows to increment or decrement the desired RPM. Press the Enter button to advance to the storage confirmation window. Setting this value too high may result in lower fuel efficiency and can also force the output voltage too high and damage your equipment or the generator!


Set maximum RPM

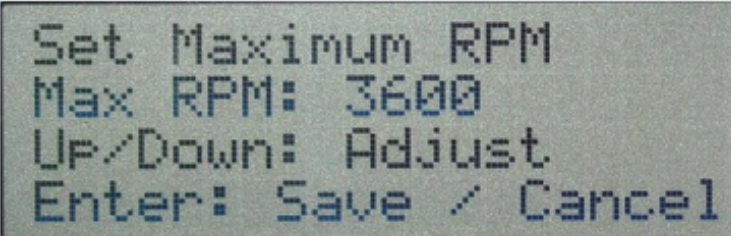

```
Set Maximum RPM
Max RPM: 3600
Up/Down: Adjust
Enter: Save / Cancel
```

This option allows you to set the maximum RPM for the engine to turn before triggering an Over RPM fault and shut off. Use the Up and Down arrows to increment or decrement the desired RPM. Press the Enter button to advance to the storage confirmation window.


Set crank time

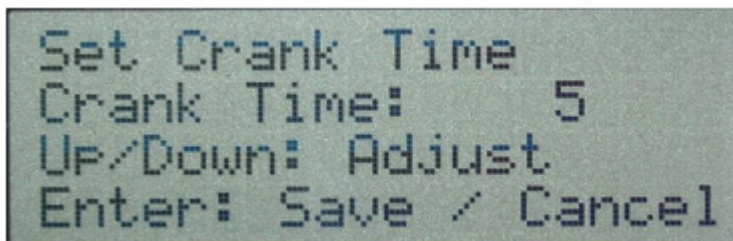

```
Set Crank Time
Crank Time:    5
Up/Down: Adjust
Enter: Save / Cancel
```

This option allows you to set the length of time to engage the starter during the engine start sequence. Use the Up and Down arrows to increment or decrement the time in seconds. Press the Enter button to advance to the storage confirmation window. Setting this value too high may result in draining the starting battery if the engine does not start!


Set crank rest

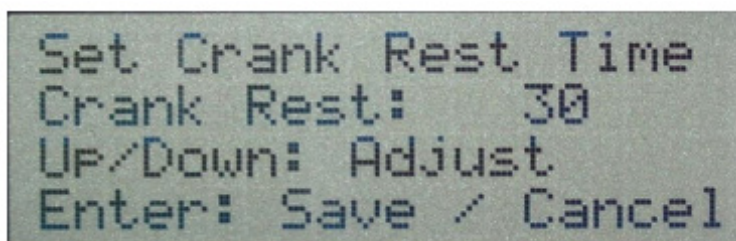

```
Set Crank Rest Time
Crank Rest:    30
Up/Down: Adjust
Enter: Save / Cancel
```

This option allows you to set the length of time for the engine to rest between crank attempts. The glow plug is OFF during this time! Use the Up and Down arrows to increment or decrement the time in seconds. Press the Enter button to advance to the storage confirmation window.

Set crank attempts

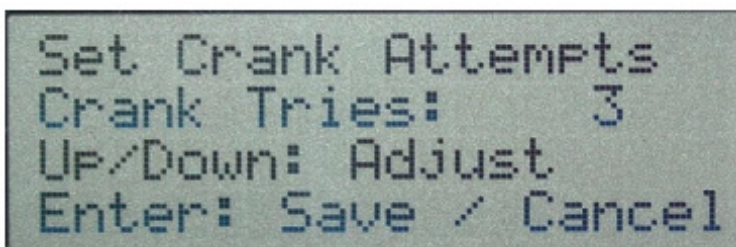

```
Set Crank Attempts
Crank Tries:    3
Up/Down: Adjust
Enter: Save / Cancel
```

This option allows you to set the number of times to try and start the engine before giving up and setting the "Failed Start" flag. Use the Up and Down arrows to increment or decrement the number of attempts. Press the Enter button to advance to the storage confirmation window. Setting this value too high may result in draining the starting battery!



249 E. Gardena Blvd, Gardena CA 90248
Tel.: +1(310)8309153 • Fax: +1(310)7192385
info@polarpowerinc.com • www.polarpower.com